



WEB-ENABLED GRAPHIC OPERATOR INTERFACE TERMINALS

G3 SERIES HMI



Starts at
\$599

G3 Series HMI, starts at \$599, shown smaller than actual size.

- Remote Monitoring and Operation
- The Most On-Board Comms Ports
- Built-In Ethernet
- Protocol Converter
- Affordable Price



Now you can make complete integration of your machine a reality. The G3 HMI Series features the most on-board communications ports of any HMI available, and lets you web- and network-enable many different types of hardware using integrated Ethernet. Control multiple devices including PLCs, PCs, drives, PID controllers and more—at speeds up to 115 kBaud. Three serial ports are standard, and with an inexpensive expansion card, the G3 HMI integrated protocol converter can communicate with as many as five different device types. No HMI offers that kind of connectivity at any price. And the best news is, the G3 HMIs actually cost LESS than many HMIs with far fewer features.

A Variety of Affordable Models Deliver the Most Value of Any HMI

G3 HMIs are available in a variety of models and sizes to meet your machine requirements. Each model combines unique capabilities normally expected from high-end units, yet at a very affordable price. One RS422/485 port and two RS232 ports are standard, and each port is format and Baud rate programmable up to 115,200 Baud. One each RS232 and RS422/485 ports are available with an option card, providing up to five comms ports per G3 HMI.

The Easiest and Most Flexible Software; and It's Free

Red Lion's remarkable Crimson 2 software is a powerful programming platform that gives the G3 Series a number of exclusive functions. Its sophistication also makes all the complex capability of the G3 manageable, with user friendly drag and drop data mapping. Crimson is universal to all Red Lion HMIs. And unlike competitive HMIs that charge you extra for what is often very cumbersome and difficult proprietary software, the initial set up of Crimson is very easy and virtually self-explanatory. Crimson includes an extensive library of device drivers to quickly establish communications between the G3 and virtually any device. Once communication is established, anything the G3 can communicate with is now Ethernet-enabled via the built-in gateway and protocol converter. This capability is unavailable in any other HMI Panel. Best of all, Crimson is free. As are


software updates, support, cabling instructions and communication drivers. In fact, if a specific device driver does not exist, Red Lion will write one for you. Try finding this level of support and value with any other HMI!

Integrated Protocol Converter Has Them All Talking

Crimson features a built in gateway that converts any attached device's serial protocol to 10 Base T/100 Base-TX Ethernet and automatically web-enables the device. Disparate serial devices now speak the same language, and unlike other HMIs that require you to purchase a protocol converter for up to \$1,000 additional—on the G3 Series, it's standard.

Built-In Web Server Offers Remote Access and Control

The Crimson web server is capable of providing remote access to the G3 via a

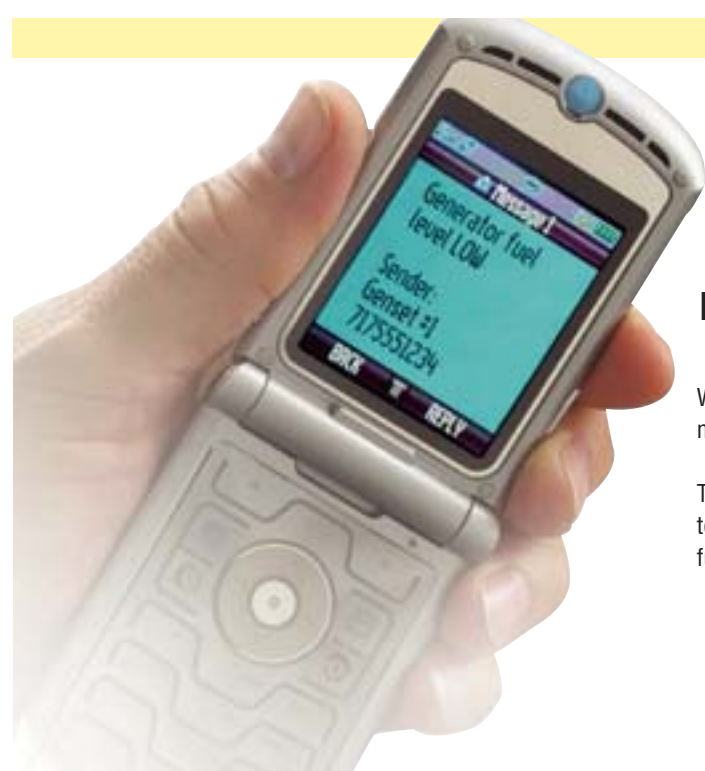

Lower Manpower and Travel Costs

Why check up on equipment performance manually when you can have the process notify you of pending failure?

The G3 series can connect via Ethernet, landline modems, or even cellular modems to reach you anywhere in the world. With built-in email and text messaging functions, the G3 allows you to focus only on the areas of concern.

number of mechanisms. First, you can use Crimson to automatically generate web pages that contain lists of tags—each formatted according to the tag's properties. You can also create a custom web site, using a third party HTML editor such as Microsoft FrontPage, with code that instructs Crimson to insert live tag values for realtime monitoring. And finally, you can enable Crimson's Virtual Panel, a unique remote access and control feature, which allows a web browser to not only view the G3's display in realtime, but control its keypad and operate any of its Ethernet-enabled devices remotely. This feature is only available in the G3 HMI Series.

Multi-Device Data Logging Capabilities

Crimson allows users to quickly set up any number of devices in a control application, collect performance data, display it, store it for evaluation, or trigger PLC functions with one panel—either live or remotely. Data may be recorded as quickly as once per second and can be acquired from one or all connected devices. Values are stored in CSV (comma separated variable) files that can easily be imported into applications such as Microsoft Excel. Unique to the G3 HMI, Crimson's web server can be used to expose various data via the G3 panel's Ethernet port, allowing remote access to diagnostic information, or to the values recorded by the data logger.

Virtually Unlimited Data Storage with CompactFlash

An integrated CompactFlash slot accommodates inexpensive and readily available Type I and II CompactFlash cards that lets you collect, retain and transfer data easily. If you need to update the database within a machine that is already installed at a customer's site, Crimson allows you to save a copy of the database to a CompactFlash card, ship that card to your customer, and have the G3 load the database from that card.

Faster Data Transfer and Downloading with USB

The G3 HMI Series features a convenient USB port for fast downloads of configuration files from a PC as well as trending and data logging uploads to your PC for analysis.

Powerful Processing

The G3 HMI Series features an onboard 32-bit processor for unmatched computing capability. The full-featured Crimson software contains a built-in "C" compiler to create custom programs for complex applications, recipe handling, realtime scheduling, math expression evaluation and much more.

Faster Configuration and Programming

Crimson 2 is a powerful set of icon-based, configuration, display, control and data logging tools designed specifically to take full advantage of the G3 HMI Series architecture. The majority of simple applications can be quickly set up using a step-by-step process to configure communications protocols, define the data tags to be accessed, and create the user interface. A full set of drag and drop graphical items makes creation of the interface easy while yielding professional results. More advanced features, such as programming, data logging and configuring the G3's web server, are intuitive and easily enabled.

The Lowest Priced, Full-Featured HMIs

For less than many stripped-down HMIs, you can add the powerful capabilities and ease of use found only in the G3 HMI Series. The G3 Series HMIs start as low as \$599, and come standard with three serial comms, Ethernet, protocol converter, USB, and CompactFlash slot. And at no extra charge, you get full-featured Crimson 2 software with drag and drop configuration and data tagging, easy-to-use interface tools, flexible programming environment, powerful data logging, and our exclusive Virtual Panel and web server capabilities for remote access and control.



The Only HMI That Web-Enables Any Device for Remote Operation Across Your LAN or the Internet



Red Lion's G3 HMI Series is not only the first to communicate with up to five different types of serial devices simultaneously, but lets you access, monitor and control these devices remotely—from across your network, or around the globe.

Accessory Cables

The following cables may be used to connect the G3 HMI, Data Station Plus or Red Lion Modular Controller Master to the listed device.

MODEL NO.	PRICE	DESCRIPTION	MODEL NO.	PRICE	DESCRIPTION
CBLAB001	\$41	Allen Bradley SLC-503 V DF 1	CBLOMR03	\$41	Omron C-SERIES RS422
CBLAB002	41	Allen Bradley PLC-5 V CHNL 0	CBLPROG0	41	RJ-11 PROG. Lead 10FT
CBLAB003	41	Allen Bradley DH48	CBLRLC00	31	485 G3 RJ45 - RL RJ11
CBLAB004	41	Allen Bradley PNLVW VIA DF1	CBLRLC01	21	RJ12-RJ12 1' Crossed
CBLGEF01	41	Ge Fanuc 90S V SNP	CBLRLC02	21	RJ12-RJ12 10' Crossed
CBLGEN01	41	RS232 TO MALE 9-PIN	CBLRLC03	21	RJ45-RJ45 1' Straight
CBLGEN02	41	RS232 Bare Wires	CBLRLC04	21	RJ45-RJ45 10' Straight
CBLGEN03	41	RS422/485 Bare Wires	CBLRLC05	31	RS485 Jumpered
CBLIDE01	41	Idec Micro 3	CBLRLC06	31	MC TO RED LION RJ11 RS485
CBLIDE02	41	Idec Micro 3C	CBLRLC07	31	RJ45-RJ45 6" Straight
CBLIDE03	41	Idec Micro Smart	CBLRLCS2	21	RJ12-RJ12 10' Straight
CBLKEY01	41	Keyence KV Series Cable	CBSLIE01	41	Siemens S7 PPI
CBLKOY00	41	Koyo Model 2xx	CBSLIE02	41	Siemens MPI with out Adaptor
CBLMAT01	41	Matsushita FP	CBSLIE03	308	Siemens MPI with Adaptor
CBLMAT02	41	Matsushita FP0	CBSLIE04	41	TI 545 on Port 1
CBLMDM00	41	Modem 9Pin Male	CBSLIE05	41	Siemens 545/555 RS232
CBLMDM01	41	Modem 25Pin Male	CBSLIE06	41	Siemens 545/555 - RS422
CBLMIT01	41	Misubishi FX	CBSLIE07	41	TI 500 Series
CBLMIT02	41	MITS FX0 and FX0N	CBSLIE08	41	Siemens-CP525 Comm Card
CBLMIT03	41	MIT A/Q	CBSLIE09	440	Siemens-S5 with Adaptor
CBLMOD01	41	Modicon (RS232)	CBLTEL00	57	G3 Telemechanique RS485
CBLOMR01	41	Omron (RS232)	CBLTEL01	57	G3 Telemechanique SLV 485
CBLOMR02	41	Omron SYS C200H-LK210	CBLYAS01	41	Yaskawa SMC3010


THE G303 OPERATOR INTERFACE



Starts at
\$599



- Up To 5 RS232/422/485 Communications Ports (2 RS232 and 1 RS422/485 On Board, 1 RS232 and 1 RS422/485 On Optional Communications Card)
- 10 Base T/100 Base-TX Ethernet Port To Network Units and Host Web Pages
- USB Port To Download The Unit's Configuration from a PC Or for Data Transfers To a PC
- Unit's Configuration Is Stored In Non-Volatile Memory (4 MB Flash)
- CompactFlash® Socket To Increase Memory Capacity
- 3.2" 128 x 64 Pixel LCD With Yellow Led Backlight, Able To Support Text and Simple Graphics
- Outdoor Unit With UV Rated Overlay Available
- 32 Button Keypad With User Identifiable Keys, Navigational Keys, Numeric Keys, Keys for On-Screen Menus, and Other Various Keys
- Three Front Panel LEDs
- Power Unit From 24 Vdc ±20% Supply
- For Use in Hazardous Locations: Class I, Division 2, Groups A, B, C, and D; Class II, Division 2, Groups F and G; Class III, Division 2

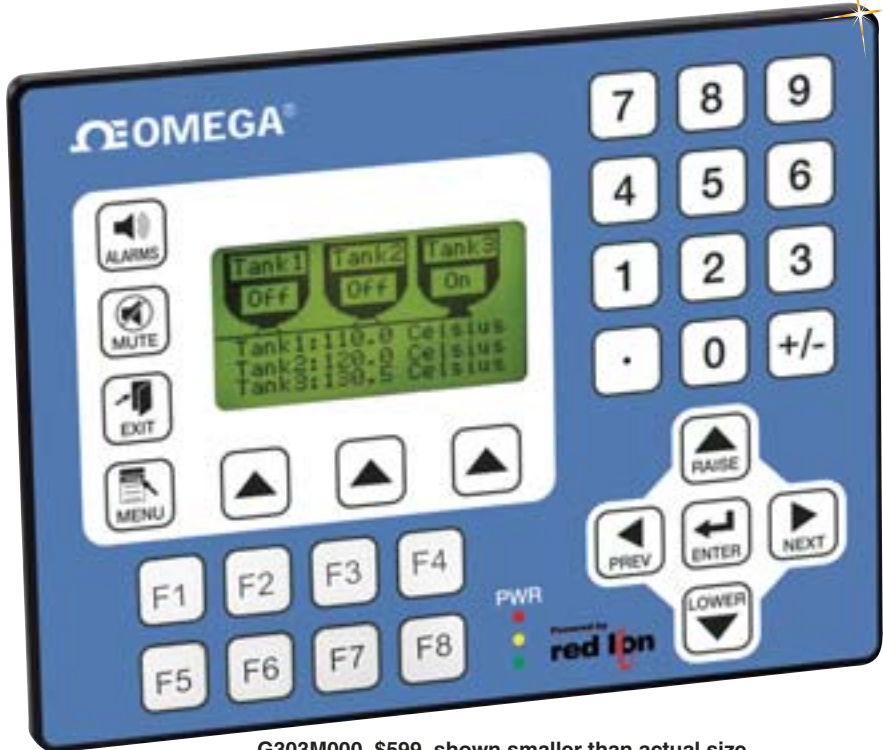

G303M000, \$599, shown smaller than actual size.

T/100 Base-TX communications. In addition, the G303 features USB for fast downloads of configuration files and access to trending and data logging. A CompactFlash socket is provided so that Flash cards can be used to collect your trending and data logging information as well as to store larger configuration files. In addition to accessing

and controlling of external resources, the G303 allows a user to easily view and enter information. The unit uses a Liquid Crystal Display (LCD) module, which is easily readable in both indoor and outdoor applications. Users can enter data through the front panel 32-button keypad that has user identifiable keys.

To Order (Specify Model Number)

AVAILABLE FOR FAST DELIVERY!

MODEL NO.	PRICE	DESCRIPTION
G303M000	\$599	3.2" operator interface, LCD 128 x 64 pixel, indoor use
G303S000	649	3.2" operator Interface, LCD 128 x 64 pixel, outdoor use
G3CF064M	90	64 MB compact flash card (industrial grade)
G3CF256M	235	256 MB compact flash card (industrial grade)
G3CF512M	368	512 MB compact flash card (industrial grade)
SFCRM200	62	Crimson programming software, manual and USB cable
PSDR0100	129	DIN rail power supply, 24 Vdc, 1 A
CBLPROG0	41	RS232 programming cable
CBLUSB00	26	USB programming cable (included with SFCRM200)
G3FILM10	45	Pack of 10 protective films for G303
G3RS0000	131	2 Port RS232/485 (isolated) option card
G3PBDP00	395	Profibus option card
G3DN0000	395	DeviceNet option card
G3CN0000	135	CANopen option card

The G303 Operator Interface Terminal combines unique capabilities normally expected from high-end units with a very affordable price. The G303 is able to communicate with many different types of hardware using high-speed RS232/422/485 communications ports and Ethernet 10 Base

Comes with panel gasket, 2 user legendable key sheets, template for panel cutout, hardware packet for mounting unit into panel, terminal block for connecting power and operator's manual. **Ordering Example: G303M000, operator interface, SFCRM200, crimson programming software, manual and USB cable. PSDR0100, power supply, \$599 + 62 + 129 = \$790.**

omega.co.uk[®]

Your One-Stop Source for Process Measurement and Control!

Freephone 0800 488 488 | International +44(0) 161 777 6622 | Fax +44(0) 161 777 6622 | Sales@omega.co.uk

www.omega.co.uk



UNITED STATES

www.omega.com

1-800-TC-OMEGA
Stamford, CT.

CANADA

www.omega.ca

Laval(Quebec)
1-800-TC-OMEGA

GERMANY

www.omega.de

Deckenfronn, Germany
0800-8266342

UNITED KINGDOM

www.omega.co.uk

Manchester, England
0800-488-488
+44-(0)161-777-6611

FRANCE

www.omega.fr

0800-466-342

BENELUX

www.omega.nl

0800-099-33-44



More than 100,000 Products Available!

• Temperature

Calibrators, Connectors, General Test and Measurement Instruments, Handheld Instruments for Temperature Measurement, Ice Point References, Indicating Labels, Crayons, Cements and Lacquers, Infrared Temperature Measurement Instruments, Recorders, Relative Humidity Measurement Instruments, PT100 Probes, PT100 Elements, Temperature & Process Meters, Timers and Counters, Temperature and Process Controllers and Power Switching Devices, Thermistor Elements, Probes and Assemblies, Thermocouples, Thermowells and Head and Well Assemblies, Transmitters, Thermocouple Wire, RTD Probes

• Flow and Level

Air Velocity Indicators, Doppler Flowmeters, Level Measurement, Magnetic Flowmeters, Mass Flowmeters, Pitot Tubes, Pumps, Rotameters, Turbine and Paddle Wheel Flowmeters, Ultrasonic Flowmeters, Valves, Variable Area Flowmeters, Vortex Shedding Flowmeters

• pH and Conductivity

Conductivity Instrumentation, Dissolved Oxygen Instrumentation, Environmental Instrumentation, pH Electrodes and Instruments, Water and Soil Analysis Instrumentation

• Data Acquisition

Communication Products and Converters, Data Acquisition and Analysis Software, Data Loggers Plug-in Cards, Signal Conditioners, USB, RS232, RS485, Ethernet and Parallel Port Data Acquisition Systems, Wireless Transmitters and Receivers

• Pressure, Strain and Force

Displacement Transducers, Dynamic Measurement Force Sensors, Instrumentation for Pressure and Strain Measurements, Load Cells, Pressure Gauges, Pressure Reference Section, Pressure Switches, Pressure Transducers, Proximity Transducers, Regulators, Pressure Transmitters, Strain Gauges, Torque Transducers, Valves

• Heaters

Band Heaters, Cartridge Heaters, Circulation Heaters, Comfort Heaters, Controllers, Meters and Switching Devices, Flexible Heaters, General Test and Measurement Instruments, Heater Hook-up Wire, Heating Cable Systems, Immersion Heaters, Process Air and Duct, Heaters, Radiant Heaters, Strip Heaters, Tubular Heaters