
OMB-DBK20 and OMB-DBK21 48-Line General-Purpose Digital I/O Cards for OMB-LOGBOOK and DAQBOARD-2000 Series

\$209

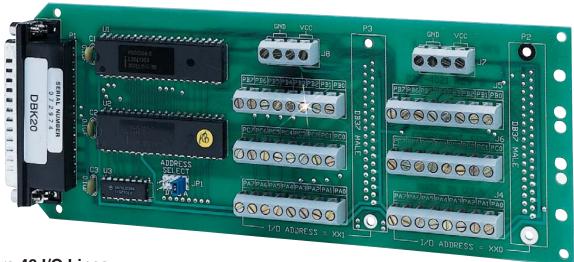

Offers 48 I/O Lines Expandable in 8-Bit Groups as Inputs or Outputs

The OMB-DBK20 and OMB-DBK21 general-purpose digital I/O cards expand the number of digital I/O lines by forty-eight per card. The OMB-DBK20 and OMB-DBK21 connect to the digital I/O connectors on the OMB-LOGBOOK, OMB-DAQBOARD-2000 Series or OMB-DIGIBOOK-72 data acquisition systems.

Please note that when either the OMB-DBK20 or OMB-DBK21 is connected, the OMB-LOGBOOK, OMB-DAQBOARD-2000 Series or OMB-DIGIBOOK-72 digital I/O lines do not function as digital I/O lines for user-connected digital signals. Thus, for example, the first OMB-DBK20 or OMB-DBK21 card attached increases the system's number of usable digital I/O lines from twenty-four to forty-eight, and subsequent cards each add forty-eight additional lines of user-programmable digital I/O.

The OMB-DBK20, \$209 and OMB-DBK21, \$209 increase the digital I/O capacity of the OMB-LOGBOOK and DAQBOARD-2000 Series (OMB-DBK20 shown above)

Up to four OMB-DBK20 or OMB-DBK21 cards can be attached to the P2 port of a system, for a total of 192 lines.

The OMB-DBK20 and OMB-DBK21 differ only in that the OMB-DBK20 features screw-terminals for signal outputs, whereas the OMB-DBK21 provides DB37 male connectors for signal outputs.

Specifications

48 I/O channels programmable in 8-bit groups as inputs or outputs

Connector: DB37 male, mates with P2 pinout on an OMB-LOGBOOK, OMB-DAQBOARD-2000 Series (attachment to the DAQBOARD's P2 further requires the use of an optional OMB-CA-60 cable) or with P2-1, P2-2 or P2-3 on the OMB-DIGIBOOK-72; the OMB-DBK20 offers screw-terminals for signal outputs; the OMB-DBK21 offers DB37 male connectors for signal outputs



Device: 82C55 x 2
Output Voltage Levels
Minimum "1" Voltage:
3.0 @ 2.5 mA sourcing
Maximum "0" Voltage:

0.4 @ 2.5 mA sinking

Output Currents

Maximum Source Current: 2.5 mA Maximum Sink Current: -2.5 mA

Input Voltage Levels

Minimum Required "1" Voltage

Level: 2 V

Maximum Allowed "0" Voltage

Level: 0.8 V

Output Float Leakage Current:

10 μA

Cables: Use OMB-CA-37-x cable with OMB-LOGBOOK and OMB-DAQBOARD-2000 Series

ALL MODELS AVAILABLE FOR FAST DELIVERY!

To Order (Specify Model Number)		
Model Number	Price	Description
OMB-DBK20	\$209	48-Line General-Purpose Digital I/O Card with Screw Terminal Connectors
OMB-DBK21	209	48-Line General-Purpose Digital I/O Card with DB37 Field Interface

Ordering Example: OMB-DBK20 is a 48-line general-purpose digital I/O card with screw terminals, \$209.

omega.co.uk®

Your One-Stop Source for Process Measurement and Control!

www.omega.co.uk



UNITED STATES

www.omega.com 1-800-TC-OMEGA Stamford, CT.

CANADA

www.omega.ca Laval(Quebec) 1-800-TC-OMEGA

GERMANY

www.omega.de Deckenpfronn, Germany 0800-8266342

UNITED KINGDOM

Freephone 0800 488 488 | International +44(0) 161 777 6622 | Fax +44(0) 161 777 6622

www. omega.co.uk Manchester, England 0800-488-488 +44-(0)161-777-6611

FRANCE

www.omega.fr 0800-466-342

BENELUX

www.omega.nl 0800-099-33-44



Sales@omega.co.uk

More than 100,000 Products Available!

Temperature

Calibrators, Connectors, General Test and Measurement Instruments, Handheld Instruments for Temperature Measurement, Ice Point References, Indicating Labels, Crayons, Cements and Lacquers, Infrared Temperature Measurement Instruments, Recorders, Relative Humidity Measurement Instruments, PT100 Probes, PT100 Elements, Temperature & Process Meters, Timers and Counters, Temperature and Process Controllers and Power Switching Devices, Thermistor Elements, Probes and Assemblies, Thermocouples, Thermowells and Head and Well Assemblies, Transmitters, Thermocouple Wire, RTD Probes

Flow and Level

Air Velocity Indicators, Doppler Flowmeters, Level Measurement, Magnetic Flowmeters, Mass Flowmeters, Pitot Tubes, Pumps, Rotameters, Turbine and Paddle Wheel Flowmeters, Ultrasonic Flowmeters, Valves, Variable Area Flowmeters, Vortex Shedding Flowmeters

pH and Conductivity

Conductivity Instrumentation, Dissolved Oxygen Instrumentation, Environmental Instrumentation, pH Electrodes and Instruments, Water and Soil Analysis Instrumentation

Data Acquisition

Communication Products and Converters, Data Acquisition and Analysis Software, Data Loggers Plug-in Cards, Signal Conditioners, USB, RS232, RS485, Ehernet and Parallel Port Data Acquisition Systems, Wireless Transmitters and Receivers

Pressure, Strain and Force

Displacement Transducers, Dynamic Measurement Force Sensors, Instrumentation for Pressure and Strain Measurements, Load Cells, Pressure Gauges, Pressure Reference Section, Pressure Switches, Pressure Transducers, Proximity Transducers, Regulators, Pressure Transmitters, Strain Gauges, Torque Transducers, Valves

Heaters

Band Heaters, Cartridge Heaters, Circulation Heaters, Comfort Heaters, Controllers, Meters and Switching Devices, Flexible Heaters, General Test and Measurement Instruments, Heater Hook-up Wire, Heating Cable Systems, Immersion Heaters, Process Air and Duct, Heaters, Radiant Heaters, Strip Heaters, Tubular Heaters