

# OMB-DBK43A 8-Channel Strain-Gage Module for OMB-DAQBOARD-2000 Series and OMB-LOGBOOK

Model OMB-DBK43A

**\$2799**



The OMB-DBK43A, \$2599, shown smaller than actual size, provides 8 channels of strain-gage input for the OMB-LOGBOOK and OMB-DAQBOARD-2000 Series

- ✓ Provides Eight Channels of Strain-Gage Input
- ✓ Accommodates Most Bridge-Type Sensors, Including 4-Element Full and 3-Wire Quarter Bridges
- ✓ Individual Excitation Regulator Per Channel
- ✓ User-Selected Low Pass Filter

The OMB-DBK43A eight-channel strain-gage expansion module for OMEGA's OMB-LOGBOOK and OMB-DAQBOARD-2000 Series data acquisition systems accommodates the connection of most strain-gage types, from single-element, 3-wire quarter-bridges to 4-element full bridges. The OMB-DBK43A also includes provisions for bridge completion resistors and provides four externally

accessible adjustments on each of its eight channels, including excitation voltage, input gain, offset nulling, and output scaling. Up to thirty-two OMB-DBK43A modules can be connected to a single OMB-LOGBOOK or OMB-DAQBOARD-2000 Series, for up to 256 strain-gage channels.

The OMB-DBK43A includes a built-in DC/DC converter, allowing the unit to be operated from an external power source while drawing very little power from the data acquisition system. The external power source can be the included AC adaptor, the OMB-DBK30A rechargeable battery/excitation module, a car battery, or any 9 to 18 Vdc source.

The DC/DC converter also provides excitation voltages for all channels. Each of its eight on-board excitation regulators can be externally adjusted from 1.5 to 10.5 Vdc.


The regulator outputs have remote sensing terminals and feature 50 mA current limiting to prevent damage from short-circuits or overloads. The wide regulator voltage range lets you incorporate virtually any resistive or semi-conductive gage type in your system.

### Input Amplifier

The OMB-DBK43A's input amplifiers provide an input gain range of x100 to 1250.

### Offset & Scaling Gain

The OMB-DBK43A's 0 to 5 Vdc offset adjustment range and output-gain scaling permit nulling of large quiescent loads and expansion of dynamic range for maximum resolution. This is an important feature because strain gages typically exhibit pre-load or quiescent output, leading to a non-zero output prior to the application of the load to be measured.

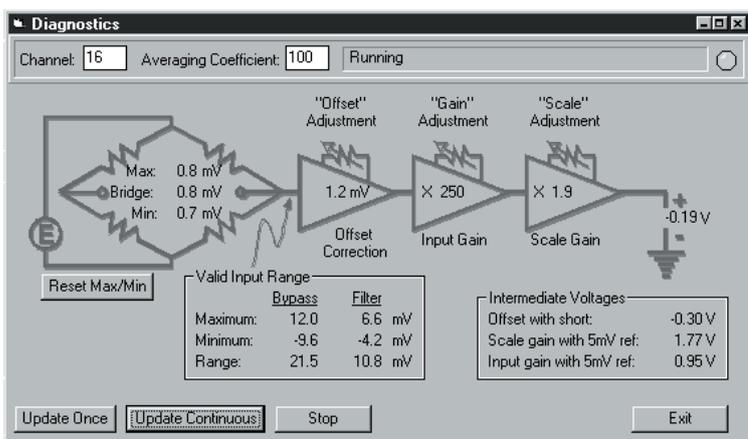

You can easily configure the OMB-DBK43A using its Windows software.

## Software

The OMB-DBK43A includes a Windows program that enables you to easily configure, calibrate, and set up your strain-gage application.

### Shunt-Calibration Feature

The OMB-DBK43A offers locations in each channel amplifier for user-supplied shunt calibration resistors. This feature allows you to simulate, under software control, a pre-set bridge disturbance to aid in calibration and verification of each channel setting.

### Coupling & Filtering

Each OMB-DBK43A channel features user-selectable AC or DC coupling between the input amplifier circuits, and a selectable 3-pole, low-pass filter with customizable cut-off frequency.

### Bridge-Completion Resistors

Physical locations are provided for up to four bridge-completion resistors per channel, allowing you to accommodate virtually any type of external configuration without having to attach bridge completion resistors to the strain gage.

## Specifications

**Connector:** DB37 male, mates with P1 pinout on the OMB-LOGBOOK or OMB-DAQBOARD-2000 Series; mini-DIN 6 provided separately for each strain-gage & external excitation connection

**Number of Channels:** 8

**Excitation Voltage Adjustment**

**Range:** 1.50 to 10.50 Vdc @ 50 mA

**Input Gain Range:** x100 to 1250; separate instrumentation amplifier for each channel

**Accommodated Bridge Types:**

Full bridge, Kelvin excitation (6-wire)

Full bridge (4-wire)

Half bridge (3-wire)

Quarter bridge (2-wire)


**Input Type:** Differential

**Input Impedance:** 100 M $\Omega$  parallel with 100 pF

**CMRR:** 115 dB (dc to 60 Hz)

**Input Power Source:**User supplied 9 to 18 Vdc @ 600 mA max

**Excitation Current Output:** 50 mA max (current limited @ 60 mA)

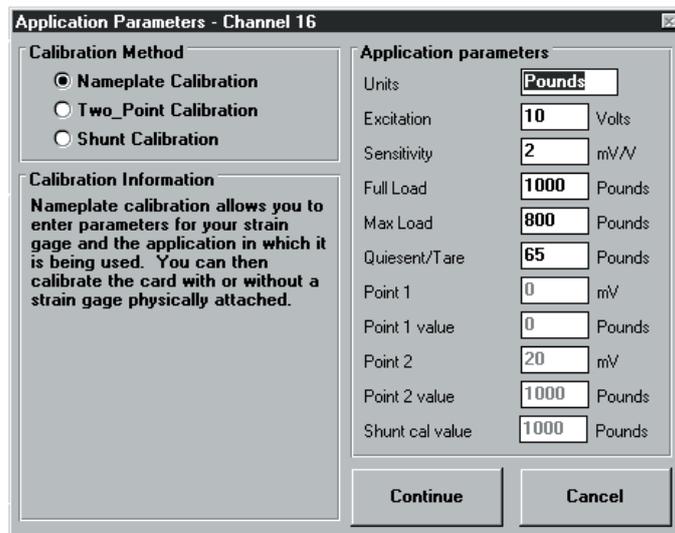

The OMB-DBK43A's software supports three calibration methods: nameplate, two-point and shunt

**Excitation Sensing:** Local or remote

**Input Offset:** 200  $\mu$ V max

**Offset Drift:** 4  $\mu$ V/C $^\circ$

**Output Offset:** 4 mV

**Offset Drift:** 6  $\mu$ V/C $^\circ$

**Offset Adjustment:** 0 to 100% of range, 0 to 5.00 Vdc

**Full-Scale Sensitivity Range:**

**At 5.00 Vdc excitation:**  
0.8 to 10 mV/V

**At 10.00 Vdc excitation:**  
0.4 to 5 mV/V

**Scaling Amplifier Gain Range:**

x1 to 10 (15-turn trimpot)

**Low-Pass Filter:** 3-pole, user selectable; corner frequency (Fc) set by user-supplied component; attenuation -3 dB at Fc; gain x2 (10 Hz installed)

**Dimensions:** 221 x 285 x 35 mm (8.5 x 11 x 1.375")

**Weight:** 1.3 kg (3 lb)

**Cables:**

Use OMB-CA-37-x for OMB-LOGBOOK and OMB-DAQBOARD-2000 Series

**AVAILABLE FOR FAST DELIVERY!**

## To Order (Specify Model Number)

Model Number	Price	Description
OMB-DBK43A	\$2799	8-channel strain-gage module
OMB-CA-132	103	Set of 8 MINI-DIN 6 connectors with 1.8 m (6') cable (connects strain gages to OMB-DBK43A)

**Ordering Example:** OMB-DBK43A 8-channel strain-gage module and OMB-CA-132, set of eight 1.8 m (6') cables with mating Mini-DIN 6 connectors and OMEGACARE<sup>SM</sup> 1-year extended warranty for OMB-DBK43A (adds 1 year to standard 1-year warranty) \$2799 + 103 + 150 = \$3052.

# omega.co.uk<sup>®</sup>

Your One-Stop Source for Process Measurement and Control!

Freephone 0800 488 488 | International +44(0) 161 777 6622 | Fax +44(0) 161 777 6622 | Sales@omega.co.uk

[www.omega.co.uk](http://www.omega.co.uk)



#### UNITED STATES

[www.omega.com](http://www.omega.com)

1-800-TC-OMEGA

Stamford, CT.

#### CANADA

[www.omega.ca](http://www.omega.ca)

Laval(Quebec)

1-800-TC-OMEGA

#### GERMANY

[www.omega.de](http://www.omega.de)

Deckenpfronn, Germany

0800-8266342

#### UNITED KINGDOM

[www.omega.co.uk](http://www.omega.co.uk)

Manchester, England

0800-488-488

#### FRANCE

[www.omega.fr](http://www.omega.fr)

088-466-342

#### CZECH REPUBLIC

[www.omegaeng.cz](http://www.omegaeng.cz)

Karviná, Czech Republic

596-311-899

#### BENELUX

[www.omega.nl](http://www.omega.nl)

0800-099-33-44



## More than 100,000 Products Available!

### • Temperature

Calibrators, Connectors, General Test and Measurement Instruments, Handheld Instruments for Temperature Measurement, Ice Point References, Indicating Labels, Crayons, Cements and Lacquers, Infrared Temperature Measurement Instruments, Recorders, Relative Humidity Measurement Instruments, PT100 Probes, PT100 Elements, Temperature & Process Meters, Timers and Counters, Temperature and Process Controllers and Power Switching Devices, Thermistor Elements, Probes and Assemblies, Thermocouples, Thermowells and Head and Well Assemblies, Transmitters, Thermocouple Wire, RTD Probes

### • Flow and Level

Air Velocity Indicators, Doppler Flowmeters, Level Measurement, Magnetic Flowmeters, Mass Flowmeters, Pitot Tubes, Pumps, Rotameters, Turbine and Paddle Wheel Flowmeters, Ultrasonic Flowmeters, Valves, Variable Area Flowmeters, Vortex Shedding Flowmeters

### • pH and Conductivity

Conductivity Instrumentation, Dissolved Oxygen Instrumentation, Environmental Instrumentation, pH Electrodes and Instruments, Water and Soil Analysis Instrumentation

### • Data Acquisition

Auto-Dialers and Alarm Monitoring Systems, Communication Products and Converters, Data Acquisition and Analysis Software, Data Loggers Plug-in Cards, Signal Conditioners, USB, RS232, RS485 and Parallel Port Data Acquisition Systems, Wireless Transmitters and Receivers

### • Pressure, Strain and Force

Displacement Transducers, Dynamic Measurement Force Sensors, Instrumentation for Pressure and Strain Measurements, Load Cells, Pressure Gauges, Pressure Reference Section, Pressure Switches, Pressure Transducers, Proximity Transducers, Regulators, Pressure Transmitters, Strain Gauges, Torque Transducers, Valves

### • Heaters

Band Heaters, Cartridge Heaters, Circulation Heaters, Comfort Heaters, Controllers, Meters and Switching Devices, Flexible Heaters, General Test and Measurement Instruments, Heater Hook-up Wire, Heating Cable Systems, Immersion Heaters, Process Air and Duct, Heaters, Radiant Heaters, Strip Heaters, Tubular Heaters