

SELF-REGULATING HEATING CABLE/LOW TEMPERATURE


SRL Series
Starts at
\$150
25' Length




- ✓ 3, 5, 8 and 10 W/ft
- ✓ 120 and 240V
- ✓ 65°C (150°F)
Maximum Maintenance Temperature

APPLICATIONS

SRL self-regulating heating cable provides safe, reliable heat tracing for freeze protection of pipes, valves, tanks, and similar applications. The 65°C (150°F) maximum pipe maintenance temperature rating is also suitable for certain process applications. OMEGALUX® SRL can be used in hazardous as well as certain corrosive areas.

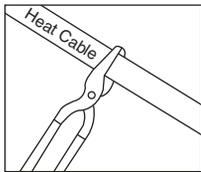


Cut to Length Field

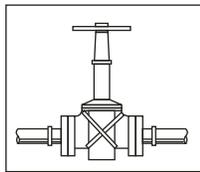


Can be Overlapped

Maintains up to 65°C (150°F)
Withstands up to 85°C (185°F)

Low Temperature

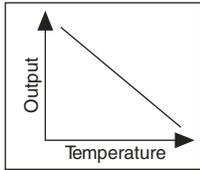

Self-Regulating

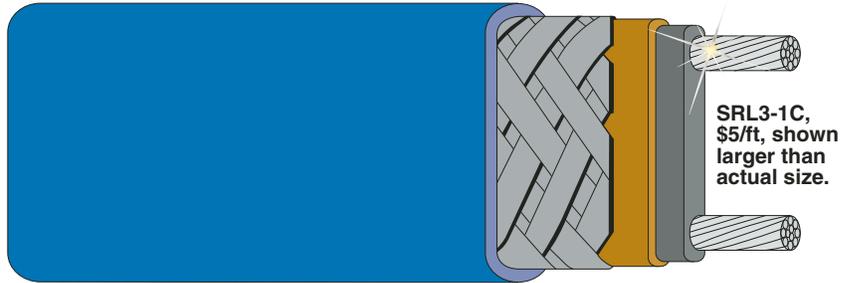

SRL3-1C, \$5/ft, shown larger than actual size.

Standard Construction

- A. Buss wires.** Twin 16 AWG copper buss wires provide good current capability.
- B. Matrix.** A semiconductive polymer core whose electrical resistance varies with temperature. When process temperature drops, the core's heat output increases; conversely, as process temperature rises, heat output decreases.
- C. Jacket.** This flame-retardant insulation jacket is a thermoplastic rubber material with excellent water resistance. It also resists certain mildly corrosive chemicals.

D. Tinned-Copper Braid. Provides additional mechanical protection and a positive ground path.

E. Optional Overcoat Over Braid ("CR" or "CT")

TPR ("CR") or fluoropolymer ("CT") jacket over the braid. The TPR coating is for certain aqueous and mainly corrosive solutions. The fluoropolymer coating is used for exposure to most other corrosive materials. Add suffix **-CR** or **-CT** to the model number.

FEATURES

- ✓ Overlap OMEGALUX SRL without fear of burnout.
- ✓ Saves energy because self-regulating SRL will throttle itself back as it senses increasing temperatures.
- ✓ Cut SRL to any desired length (up to the maximum circuit length). Field splices can be performed easily in minutes. No scrap, no wasted cold sections, no worry!

- ✓ Surpasses steam tracing by far! Lower installed cost than steam. Less maintenance, expense, and downtime.
- ✓ Self-regulating effect makes an over-temperature condition virtually impossible.
- ✓ Lower installation costs due to easier, faster installation. OMEGALUX termination kits and splice and tee kits expedite installation.

APPROVALS

Consult page 47 for third-party approval or listing information.

MOST POPULAR MODEL HIGHLIGHTED!

To Order (Specify Model Number)

Output at Rated Voltage at 10°C (50°F)		TYPE SRL							
		Tinned-Copper Braid		Tinned-Copper Braid and TPR Overcoat (-CR)			Tinned-Copper Braid and Fluoropolymer Overcoat (-CT)		
Watts/Ft.	Volts	Model No.	Price/Ft.	Model No.	Price/Ft.	Wt. lbs./1000'	Model No.	Price/Ft.	Wt. lbs./1000'
3	120	SRL3-1C	\$5	SRL3-1CR	\$6	64	SRL3-1CT	\$7	66
3	240	SRL3-2C	6	SRL3-2CR	6	64	SRL3-2CT	7	66
5	120	SRL5-1C	5	SRL5-1CR	7	64	SRL5-1CT	8	66
5	240	SRL5-2C	6	SRL5-2CR	7	64	SRL5-2CT	9	66
8	120	SRL8-1C	7	SRL8-1CR	8	64	SRL8-1CT	9	66
8	240	SRL8-2C	7	SRL8-2CR	8	64	SRL8-2CT	9	66
10	120	SRL10-1C	7	SRL10-1CR	8	64	SRL10-1CT	10	66
10	240	SRL10-2C	7	SRL10-2CR	9	64	SRL10-2CT	10	66

Minimum length of heating cable is 7.6 m (25') See pages 50 to 53 for heat cable accessories and controls.

Ordering Examples: SRL8-1C, 120 Vac heating cable, 8 W per foot, 30 m (100') length, \$700. SRL10-1C, 120 Vac heating cable, \$7/Ft.

HEATING CABLE SYSTEMS

GENERAL SPECIFICATIONS

Maximum Pipe Maintenance Temperature/POWER ON: 65°C (150°F)
Maximum Intermittent Exposure Temperature/POWER OFF: 85°C (185°F)
Buss Wire Gauge: 16 AWG
Approximate Cable Size: $\frac{3}{16}$ x $\frac{1}{8}$ "
 (CR & CT only) $\frac{7}{16}$ x $\frac{3}{16}$ "

Alternate Voltage Operation

SRL Rating	Percent Output Operated At		
	208V	220V	277V
SRL 3-2	80%	87%	115%
SRL 5-2	82%	90%	113%
SRL 8-2	86%	91%	112%
SRL 10-2	87%	92%	110%

Maximum Circuit Lengths

SRL Rating	Max. Circuit Length	SRL Rating	Max. Circuit Length
SRL 3-1	385'	SRL 8-1	210'
SRL 3-2	695'	SRL 8-2	420'
SRL 5-1	295'	SRL 10-1	180'
SRL 5-2	540'	SRL 10-2	360'

Start-up Current (Amps/ft)

Watts /Ft.	Volts	Temperature °F		
		-20	0	+50
3	120	0.06	0.05	0.04
3	240	0.05	0.04	0.03
5	120	0.14	0.12	0.08
5	240	0.09	0.08	0.05
8	120	0.27	0.21	0.17
8	240	0.15	0.13	0.08
10	120	0.31	0.25	0.21
10	240	0.17	0.15	0.12

CIRCUIT BREAKER SELECTION

Circuit breakers must have sufficient capacity to allow for the inrush current of initial start-up. To determine the circuit breaker size required, multiply the start-up in amps/ft. times the installed total cable length in feet at the expected start-up temperature (°F).

NOTE: Thermal circuit breakers are recommended since magnetic circuit breakers could "nuisance trip" at low temperature.


THIRD PARTY APPROVALS

For a listing of Third Party Approvals, please refer to page 47.

Consult 1-800-USA-HEAT for assistance.



Thermal Output Rating

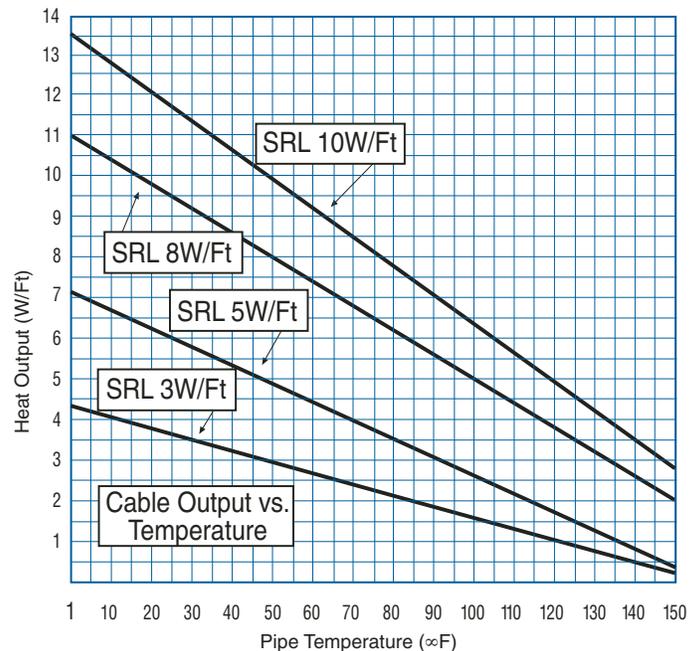

For Sales and Service in the U.S. and Canada:

1-800-872-4328[®]
1-800-USA-HEAT

omega.co.uk[®]

Your One-Stop Source for Process Measurement and Control!

Freephone 0800 488 488 | International +44(0) 161 777 6622 | Fax +44(0) 161 777 6622 | Sales@omega.co.uk

www.omega.co.uk



UNITED STATES

www.omega.com

1-800-TC-OMEGA
Stamford, CT.

CANADA

www.omega.ca

Laval(Quebec)
1-800-TC-OMEGA

GERMANY

www.omega.de

Deckenfronn, Germany
0800-8266342

UNITED KINGDOM

www.omega.co.uk

Manchester, England
0800-488-488
+44-(0)161-777-6611

FRANCE

www.omega.fr

0800-466-342

BENELUX

www.omega.nl

0800-099-33-44



More than 100,000 Products Available!

• Temperature

Calibrators, Connectors, General Test and Measurement Instruments, Handheld Instruments for Temperature Measurement, Ice Point References, Indicating Labels, Crayons, Cements and Lacquers, Infrared Temperature Measurement Instruments, Recorders, Relative Humidity Measurement Instruments, PT100 Probes, PT100 Elements, Temperature & Process Meters, Timers and Counters, Temperature and Process Controllers and Power Switching Devices, Thermistor Elements, Probes and Assemblies, Thermocouples, Thermowells and Head and Well Assemblies, Transmitters, Thermocouple Wire, RTD Probes

• Flow and Level

Air Velocity Indicators, Doppler Flowmeters, Level Measurement, Magnetic Flowmeters, Mass Flowmeters, Pitot Tubes, Pumps, Rotameters, Turbine and Paddle Wheel Flowmeters, Ultrasonic Flowmeters, Valves, Variable Area Flowmeters, Vortex Shedding Flowmeters

• pH and Conductivity

Conductivity Instrumentation, Dissolved Oxygen Instrumentation, Environmental Instrumentation, pH Electrodes and Instruments, Water and Soil Analysis Instrumentation

• Data Acquisition

Communication Products and Converters, Data Acquisition and Analysis Software, Data Loggers Plug-in Cards, Signal Conditioners, USB, RS232, RS485, Ethernet and Parallel Port Data Acquisition Systems, Wireless Transmitters and Receivers

• Pressure, Strain and Force

Displacement Transducers, Dynamic Measurement Force Sensors, Instrumentation for Pressure and Strain Measurements, Load Cells, Pressure Gauges, Pressure Reference Section, Pressure Switches, Pressure Transducers, Proximity Transducers, Regulators, Pressure Transmitters, Strain Gauges, Torque Transducers, Valves

• Heaters

Band Heaters, Cartridge Heaters, Circulation Heaters, Comfort Heaters, Controllers, Meters and Switching Devices, Flexible Heaters, General Test and Measurement Instruments, Heater Hook-up Wire, Heating Cable Systems, Immersion Heaters, Process Air and Duct, Heaters, Radiant Heaters, Strip Heaters, Tubular Heaters