



SINGLE- AND THREE-PHASE DIN RAIL MOUNT SOLID STATE RELAYS

SSRDIN Series Starts at \$53



- Ratings Up to 30 A (22.5 mm), 45 A (45 mm), or 25 A 3-Phase
- LED Input Status Indicator
- Integral Heat Sink Eliminates the Need for Complex Thermal Calculations
- DBC Substrate for Superior Thermal Performance
- Epoxy-Free Design Minimizes Internal Component Stress
- Standard Ratings Up to 30 A @ 600 Vac
- No External Transient Protection Required (Internal TVS)
- IP20 Touch-Safe Housing
- AC or DC Inputs
- 4000 Vac Optical Isolation
- Zero-Voltage Switching
- Mounts on DIN Rail or Panel

Designed for superior thermal performance in harsh industrial environments, OMEGA's new SSRDIN/SSR3PH relay is the most advanced DIN rail solid state relay in its range. The epoxy-free design eliminates stress on internal components, preventing damage to the encapsulant during load failure.

The vertical placement of the direct-bond substrate allows the SCR die to efficiently transfer heat to the heat sink and into ambient air. As a result, these relays can operate at a lower temperature than their competitors, which accounts for the higher I2T and surge-current ratings.

The SSRDIN's internal transient protection is fully repeatable, making MOVs or other external suppressors unnecessary. This

SSR3PH600DC25, \$189.



SSRDIN600DC20, \$60.



SSRDIN600DC35, \$76.



All models shown smaller than actual size.

feature allows the output to conduct load-current when a transient is detected across the output terminals, rather than forcing load-current through the protection circuit. Thus, no degradation of protection occurs.

These relays are ideal for numerous commercial and industrial applications, including mercury relay replacement, professional food-service equipment (ovens, fryers, dispensing equipment, conveyors, etc.), sterilizers, temperature control systems, plastic extrusion/thermoforming machinery, HVAC and R, kilns, packaging equipment, sorting equipment, wave solder and reflow systems, lighting systems, pump controls, incubators, motor-switching, and UPS systems.

SPECIFICATIONS

Operating Temperature:

-20 to 80°C* (-4 to 176°F)

Storage Temperature:

-40 to 100°C (-40 to 212°F)

Input-to-Output Isolation: 4000 Vrms

Input/Output-to-Ground Isolation: 4000 Vrms

Input-to-Output Capacitance: 8 pF (typical)

Operating Frequency: 40 to 63 Hz

Housing Material:



UL 940VD (self-extinguishing)

Weight: 600 g (1.3 lb)

* For 108 to 280 Vac input.



SSRDIN280DC10, \$53, shown smaller than actual size.

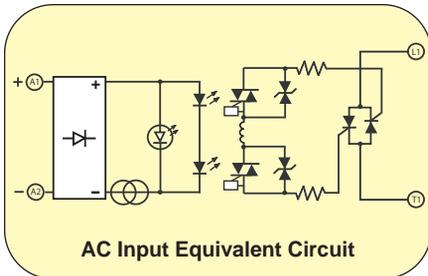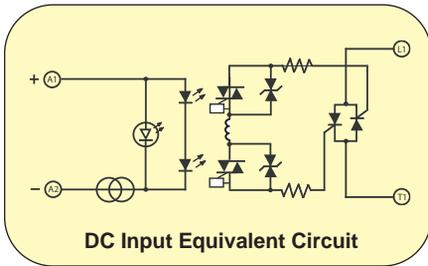

SSRDIN600DC35, \$76, shown smaller than actual size.

22.5 mm DIN Rail SSR

Output Specifications			
Voltage Range (Vrms)	24 to 240 Vac	48 to 600 Vac	600 Vac
Output Current	10	20	30
Peak Voltage (Vp, t = 1 min)	550	1100	1100
Off-State Leakage μ Arms (@ Max Line Voltage and $T_a = 25^\circ\text{C}$)	100	250	250
Minimum Current (mArms)	100	100	100
Maximum 1-Cycle Surge Current (Ap, $T_a = 25^\circ\text{C}$)	100	495	750
Maximum 1 s Surge Current (Ap, $T_a = 25^\circ\text{C}$)	30	100	150
Forward Voltage Drop (Vp @ I_{max} , $T_a = 25^\circ\text{C}$)	1.5	1.35	1.35
I^2T (60 Hz, 1/2 Cycle)	340	1020	2350
Static Off-State dv/dt (V μ s, $T_a = 25^\circ\text{C}$)	500	500	500
hp Ratings at 120 V	—	1/2	3/4
hp Ratings at 240 V	—	1	2
Output Type	Triac	SCR	SCR
Min/Max Stranded Wire	16/8 AWG	16/8 AWG	16/8 AWG
Min/Max Solid Wire	16/10 AWG	16/10 AWG	16/10 AWG

Input Specifications			
Input Voltage	4 to 32 Vdc	90 to 140 Vac	180 to 280 Vac
Dropout Voltage	1 Vdc	10 Vac	10 Vac
Minimum Input Current (for On-State)	16 mA	5 mA	6 mA
Maximum Input Current	19 mA	6 mA	8 mA
Input Resistance (Ω)	Current Regulated		
Turn-On Time*	8.33 ms	20 ms	20 ms
Turn-Off Time	8.33 ms	30 ms	30 ms
Min/Max Stranded/Solid Wire	24/16 AWG	24/16 AWG	24/16 AWG


* Random SSRs turn on in less than 100 μ s.

45 mm DIN Rail SSR

Output Specifications		
Voltage Range (Vrms)	48 to 600 Vac	48 to 600 Vac
Output Current	35	45
Peak Voltage (Vp, t = 1 min)	1100	1100
Off-State Leakage μ Arms (@ 480 V and $T_a = 25^\circ\text{C}$)	250	250
Minimum Current (mArms)	100	100
Maximum 1-Cycle Surge Current (Ap, $T_a = 25^\circ\text{C}$)	770	800
Maximum 1 s Surge Current (Ap, $T_a = 25^\circ\text{C}$)	150	160
Forward Voltage Drop (Vp @ I_{max} , $T_a = 25^\circ\text{C}$)	1.35	1.35
I^2T (60 Hz, 1/2 Cycle)	2500	2600
Static Off-State dv/dt (V μ s, $T_a = 25^\circ\text{C}$)	500	500
hp Ratings at 240 V	2	3
hp Ratings at 480 V	3	4
Output Type	SCR	SCR
Min/Max Stranded Wire	16/8 AWG	16/8 AWG
Min/Max Solid Wire	16/10 AWG	16/10 AWG

Input Specifications			
Input Voltage	4 to 32 Vdc	90 to 140 Vac	180 to 280 Vac
Dropout Voltage	1 Vdc	10 Vac	10 Vac
Minimum Input Current (for On-State)	16 mA	5 mA	6 mA
Maximum Input Current	19 mA	6 mA	8 mA
Input Resistance (Ω)	Current Regulated		
Turn-On Time*	8.33 ms	20 ms	20 ms
Turn-Off Time	8.33 ms	30 ms	30 ms
Min/Max Stranded/Solid Wire	24/16 AWG	24/16 AWG	24/16 AWG

* Random SSRs turn on in less than 100 μ s.

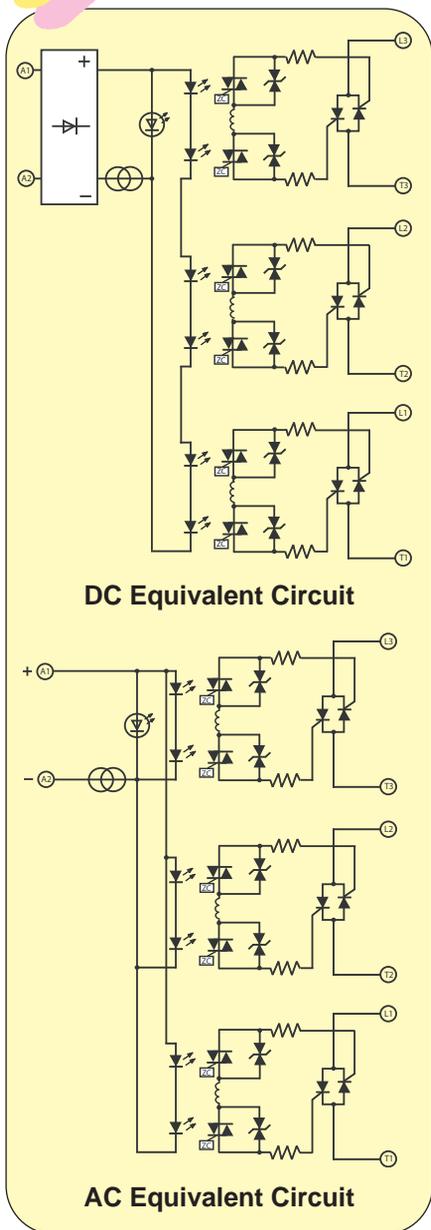

90 mm 3-Phase DIN Rail SSR

Output Specifications

Voltage Range (Vrms)	48 to 600 Vac
Output Current	25
Peak Voltage (Vp, t = 1 min)	1100
Off-State Leakage μArms (@ Max Line Voltage and $T_a = 25^\circ\text{C}$)	250
Minimum Current (mArms)	100
Maximum 1-Cycle Surge Current ($A_p, T_a = 25^\circ\text{C}$)	500
Maximum 1 s Surge Current ($A_p, T_a = 25^\circ\text{C}$)	100
Forward Voltage Drop ($V_p @ I_{max}, T_a = 25^\circ\text{C}$)	1.35
I²T (60 Hz, 1/2 Cycle)	1040
Static Off-State dv/dt $V\mu\text{s}, T_a = 25^\circ\text{C}$	500
hp Ratings at 480 V	3
Output Type	SCR
Min/Max Stranded Wire	16/8 AWG
Min/Max Solid Wire	16/10 AWG

Input Specifications

Input Voltage	4 to 32 Vdc	90 to 140 Vac	180 to 280 Vac
Dropout Voltage	1 Vdc	10 Vac	10 Vac
Minimum Input Current (for On-State)	50 mA	15 mA	19 mA
Maximum Input Current	62 mA	19 mA	24 mA
Input Resistance (Ω)	Current Regulated		
Turn-On Time*	8.33 ms	20 ms	20 ms
Turn-Off Time	8.33 ms	30 ms	30 ms
Min/Max Stranded/Solid Wire		12/16 AWG	


* Random SSRs turn on in less than 100 μs .

AC/DC Control Specifications


Model No.	Current A	Output Voltage	Input Voltage	Output Type	Size: mm (in)
SSRDIN280AC10	10	24 to 280 Vac	90 to 140 Vac	Triac	22.5 (0.9)
SSRDIN280DC10	10	24 to 280 Vac	4 to 32 Vdc	Triac	22.5 (0.9)
SSRDIN600AC20	20	48 to 600 Vac	90 to 140 Vac	SCR	22.5 (0.9)
SSRDIN600DC20	20	48 to 600 Vac	4 to 32 Vdc	SCR	22.5 (0.9)
SSRDIN600AC30	30	48 to 600 Vac	90 to 140 Vac	SCR	22.5 (0.9)
SSRDIN600DC30	30	48 to 600 Vac	4 to 32 Vdc	SCR	22.5 (0.9)
SSRDIN600AC35	35	48 to 600 Vac	90 to 140 Vac	SCR	45.0 (1.8)
SSRDIN600DC35	35	48 to 600 Vac	4 to 32 Vdc	SCR	45.0 (1.8)
SSRDIN600AC45	45	48 to 600 Vac	90 to 140 Vac	SCR	45.0 (1.8)
SSRDIN600DC45	45	48 to 600 Vac	4 to 32 Vdc	SCR	45.0 (1.8)
SSR3PH600AC25	25	48 to 600 Vac	90 to 140 Vac	SCR	90.0 (3.6)
SSR3PH600DC25	25	48 to 600 Vac	4 to 32 Vdc	SCR	90.0 (3.6)




25 MM

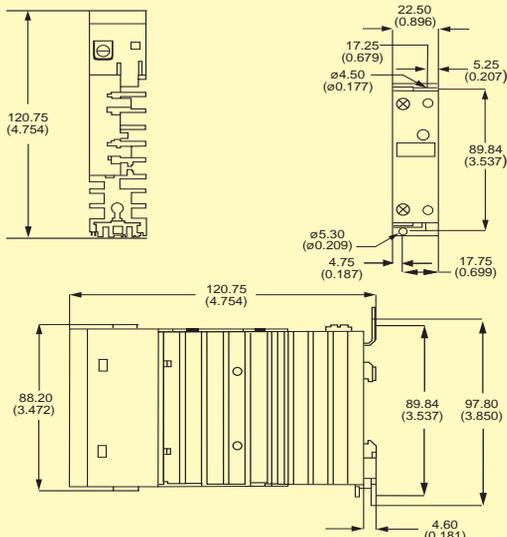

45 MM

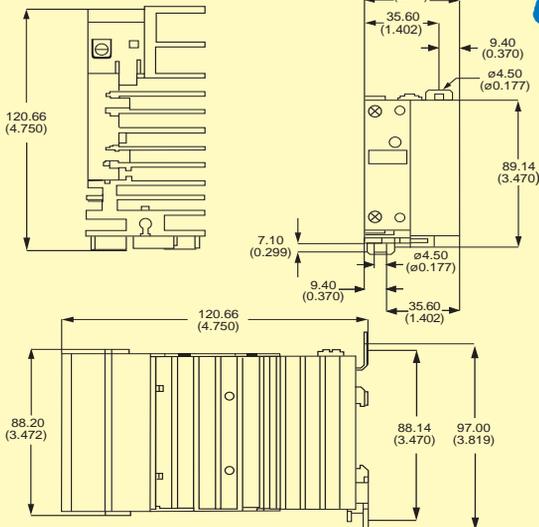

90 MM

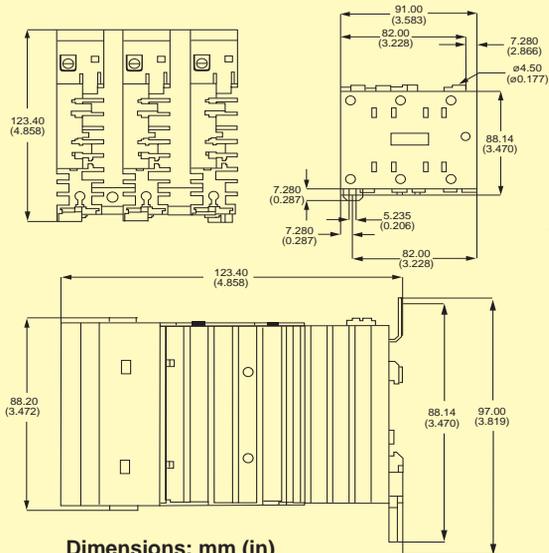

SSRDIN and SSR3PH Series solid state relays, shown smaller than actual size.



Dimensions: mm (in)

To Order (Specify Model Number)

MOST POPULAR MODELS HIGHLIGHTED!

MODEL NO.	PRICE	DESCRIPTION	NOMINAL RATING (A)
SSRDIN280DC10	\$53	DC control signal, 24 to 280 Vac line	10
SSRDIN600DC20	60	DC control signal, 48 to 600 Vac line	20
SSRDIN600DC30	66	DC control signal, 48 to 600 Vac line	30
SSRDIN280AC10	56	AC control signal, 24 to 280 Vac line	10
SSRDIN600AC20	68	AC control signal, 48 to 600 Vac line	20
SSRDIN600AC30	75	AC control signal, 48 to 600 Vac line	30
SSRDIN600DC35	76	DC control signal, 48 to 600 Vac line	35
SSRDIN600DC45	79	DC control signal, 48 to 600 Vac line	45
SSRDIN600AC35	79	AC control signal, 48 to 600 Vac line	35
SSRDIN600AC45	86	AC control signal, 48 to 600 Vac line	45
SSR3PH600DC25	189	DC control signal, 48 to 600 Vac line, 3 phase	25
SSR3PH600AC25	193	AC control signal, 48 to 600 Vac line, 3 phase	25

Comes with operator's manual.

Ordering Example: SSR3PH600DC25, DC input, 25 A, 3-phase relay, \$189.

omega.co.uk[®]

Your One-Stop Source for Process Measurement and Control!

Freephone 0800 488 488 | International +44(0) 161 777 6622 | Fax +44(0) 161 777 6622 | Sales@omega.co.uk

www.omega.co.uk



UNITED STATES

www.omega.com

1-800-TC-OMEGA
Stamford, CT.

CANADA

www.omega.ca

Laval(Quebec)
1-800-TC-OMEGA

GERMANY

www.omega.de

Deckenfronn, Germany
0800-8266342

UNITED KINGDOM

www.omega.co.uk

Manchester, England
0800-488-488
+44-(0)161-777-6611

FRANCE

www.omega.fr

0800-466-342

BENELUX

www.omega.nl

0800-099-33-44



More than 100,000 Products Available!

• Temperature

Calibrators, Connectors, General Test and Measurement Instruments, Handheld Instruments for Temperature Measurement, Ice Point References, Indicating Labels, Crayons, Cements and Lacquers, Infrared Temperature Measurement Instruments, Recorders, Relative Humidity Measurement Instruments, PT100 Probes, PT100 Elements, Temperature & Process Meters, Timers and Counters, Temperature and Process Controllers and Power Switching Devices, Thermistor Elements, Probes and Assemblies, Thermocouples, Thermowells and Head and Well Assemblies, Transmitters, Thermocouple Wire, RTD Probes

• Flow and Level

Air Velocity Indicators, Doppler Flowmeters, Level Measurement, Magnetic Flowmeters, Mass Flowmeters, Pitot Tubes, Pumps, Rotameters, Turbine and Paddle Wheel Flowmeters, Ultrasonic Flowmeters, Valves, Variable Area Flowmeters, Vortex Shedding Flowmeters

• pH and Conductivity

Conductivity Instrumentation, Dissolved Oxygen Instrumentation, Environmental Instrumentation, pH Electrodes and Instruments, Water and Soil Analysis Instrumentation

• Data Acquisition

Communication Products and Converters, Data Acquisition and Analysis Software, Data Loggers Plug-in Cards, Signal Conditioners, USB, RS232, RS485, Ethernet and Parallel Port Data Acquisition Systems, Wireless Transmitters and Receivers

• Pressure, Strain and Force

Displacement Transducers, Dynamic Measurement Force Sensors, Instrumentation for Pressure and Strain Measurements, Load Cells, Pressure Gauges, Pressure Reference Section, Pressure Switches, Pressure Transducers, Proximity Transducers, Regulators, Pressure Transmitters, Strain Gauges, Torque Transducers, Valves

• Heaters

Band Heaters, Cartridge Heaters, Circulation Heaters, Comfort Heaters, Controllers, Meters and Switching Devices, Flexible Heaters, General Test and Measurement Instruments, Heater Hook-up Wire, Heating Cable Systems, Immersion Heaters, Process Air and Duct, Heaters, Radiant Heaters, Strip Heaters, Tubular Heaters