
INTRODUCTION TO DIN RAIL TERMINAL BLOCKS



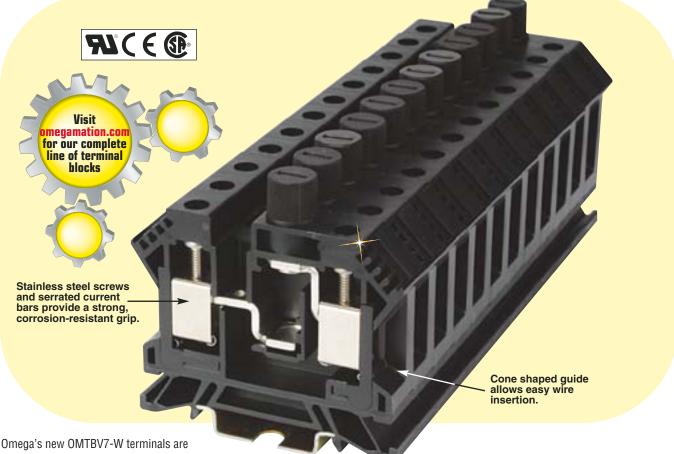

Omega's new OMTBV7-W terminals are designed to meet the three most important criteria when selecting a terminal block line – ease of wiring, secure connections and durability. The line is also comprehensive, offering a wide array of terminal types for most circuits and functions, from control to low level power.

The Size You Need

OMTBV7-W feed-through terminals come in ten sizes and are rated to 600VAC (800V-IEC). They accommodate a full range of wire sizes from 30AWG to 3/0 AWG (0.5mm2 to 70mm2 wire cross section). Many "specialty" feed-through terminals are also available that provide multiple terminations or increase the density of connections. This reduces panel space and saves money.

Comprehensive Selection of Special Terminals

Aside from the broad selection of standard feed-through terminals, many special terminals are also part of the new OMTBV7-W line, including:

- Two level terminals
- High Current terminals
- Ground terminals
- Dual connection terminals
- Diode and resistor terminals
- Plug-in style terminals
- Various isolating terminals
- Fuse terminals
- Sensor terminals
- Thermocouple terminals
- Proximity switch terminals

Even the most varied circuit requirements can be supported by the broad selection offered with this line.

Super Reliable Connections

The most important aspect of a terminal block is to join wires in a reliable connection. With OMTBV7-W terminals, a cone shaped guide allows easy insertion of the wire into a nickel plated barrel. As tightening torque is applied to strong stainless steel screws, the wire is secured between a recessed contact

pad and serrated current bar. This corrosionresistant clamping mechanism provides excellent performance in the most demanding industrial conditions.

Superior Insulation and Protection Features


All metal parts are recessed, providing a touch-safe, dead front design for optimum safety. Terminal bodies are manufactured from Polyamide 6.6, known for its excellent thermal stability, impact resistance and resistance to electrical creepage. The insulating cases are rated up to 90°C (195°) for continuous operation. They also stay elastic down to -40°C (-40°F) without fracturing.

International Approvals

Omega's new OMTBV7-W terminal block line is UL recognized and CSA Certified. Many terminals have also been certified for use in hazardous locations. The line also carries the CE Mark for use in most international markets.



GROUNDING BLOCKS

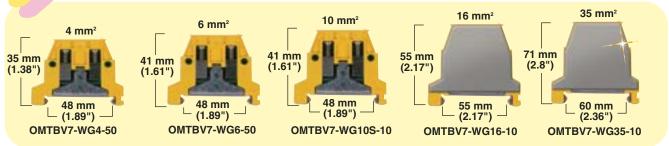

Grounding Blocks

To Order (Specify Model Number	MOST POPULAR MODELS LISTED!						
TERMINAL	MODEL NO.		PRICE	MODEL NO.	PRICE		
Gray/Yellow Pkg of 50	OMTBV7-W	G4-50	\$135.00	OMTBV7-WG	\$143.00		
ACCESSORIES							
End Barrier Pkg of 50 or 10	OMTBV7-EB	3-Y-50	\$29.50	OMTBV7-EB1	\$22.50		
End Anchors -50 (pkg of 50) -10 (pkg of 10) DIN Rail — Normal Duty DIN Rail — Heavy Duty	OMTBV7-EA35-50 OMTBV7-EAH35-10		26.00 19.60	OMTBV7-EA35-50 OMTBV7-EAH35-10		26.00 19.60	
SPECIFICATIONS							
Approvals	@ -	FU	IEC	⊕	<i>7</i> 12	ŒĊ	
Maximum Current	Grounding			Grounding			
Wire Range (Rated Cross Section)	#22 to #14 AWG	#22 to #12 AWG	4 mm²	#22 to #10 AWG	#22 to #10 AWG	6 mm ²	
Wire Strip Length		11 mm (0.43")		12 mm (0.47")			
Recommended Tightening Torque	0.7	Nm (5.6 to 6.8 lb	/in.)	0.7 Nm (5.6 to 6.8 lb/in.)			
Density	1	166/m (50 pcs./ft))	142/m (43 pcs./ft)			
Insulation Temperature Range	-40 to	90°C (-40 to 19	95°F)	-40 to 90°C (-40 to 195°F)			

TERMINAL	MODEL NO.		PRICE	MODEL NO.		PRICE	MODEL NO.		PRICE
Gray/Yellow Pkg of 10	OMTBV7-WG10S-10		\$34.40	OMTBV7-WG16-10		\$47.90	OMBV7-WG35-10		\$63.90
ACCESSORIES									
End Barrier Pkg of 50 or 10	OMTBV7-EB10-Y-50		\$22.50	Not Required		_	Not Required		_
End Anchors -50 (pkg of 50) -10 (pkg of 10) DIN Rail — Normal Duty DIN Rail — Heavy Duty	OMTBV7-EA35-50 OMTBV7-EAH35-10		26.00 19.60	OMTBV7-EA35-50 OMTBV7-EAH35-10		26.00 19.60	OMTBV7-EA35-50 OMTBV7-EAH35-10		26.00 19.60
SPECIFICATIONS									
Approvals	€	71	<u>IEC</u>	●	AI.	<u>IEC</u>	€	71	IEC
Maximum Current	Grounding			Grounding			Grounding		
Wire Range (Rated Cross Section)	#22 to #8 AWG	#22 to #8 AWG	10 mm²	#10 to #4 AWG	#10 to #4AWG	16 mm²	#6 to #1/0 AWG	#6 to #1/0 AWG	35 mm²
Wire Strip Length	11 mm (0.43")			18 mm (0.70")			21 mm (0.83")		
Recommended Tightening Torque	0.8 Nm (7.1 to 6.8 lb-in.)			2.5 Nm (22.1lb-in.)			5.0 Nm (44.3 lb-in.)		
Density	125/m (38 pcs./ft)			76/m (23 pcs./ft)		55/m (16 pcs./ft)			
Insulation Temperature Range	-40 to 90°C (-40 to 195°F)			-40 to 90°C (-40 to 195°F)			-40 to 90°C (-40 to 195°F)		

Comes with instruction sheet.

Ordering Example: OMTBV7-WG16-10, grounding block and OMTBV7-EAH35-10, end anchors, \$47.90 + 19.60 = \$67.50.

Your One-Stop Source for Process Measurement and Control!

One Omega Drive | Stamford, CT 06907 | 1-888-TC-OMEGA (1-888-826-6342) | info@omega.com

www.omega.com



UNITED STATES

www.omega.com 1-800-TC-OMEGA Stamford, CT.

CANADA

www.omega.ca Laval(Quebec) 1-800-TC-OMEGA

GERMANY

www.omega.de Deckenpfronn, Germany 0800-8266342

UNITED KINGDOM

www.omega.co.uk Manchester, England 0800-488-488

FRANCE

www.omega.fr Guyancourt, France 088-466-342

CZECH REPUBLIC

www.omegaeng.cz Karviná, Czech Republic 596-311-899

BENELUX

www.omega.nl Amstelveen, NL 0800-099-33-44



More than 100,000 Products Available!

Temperature

Calibrators, Connectors, General Test and Measurement Instruments, Glass Bulb Thermometers, Handheld Instruments for Temperature Measurement, Ice Point References, Indicating Labels, Crayons, Cements and Lacquers, Infrared Temperature Measurement Instruments, Recorders Relative Humidity Measurement Instruments, RTD Probes, Elements and Assemblies, Temperature & Process Meters, Timers and Counters, Temperature and Process Controllers and Power Switching Devices, Thermistor Elements, Probes and Assemblies, Thermocouples Thermowells and Head and Well Assemblies, Transmitters, Wire

Flow and Level

Air Velocity Indicators, Doppler Flowmeters, Level Measurement, Magnetic Flowmeters, Mass Flowmeters, Pitot Tubes, Pumps, Rotameters, Turbine and Paddle Wheel Flowmeters, Ultrasonic Flowmeters, Valves, Variable Area Flowmeters, Vortex Shedding Flowmeters

pH and Conductivity

Conductivity Instrumentation, Dissolved Oxygen Instrumentation, Environmental Instrumentation, pH Electrodes and Instruments, Water and Soil Analysis Instrumentation

Data Acquisition

Auto-Dialers and Alarm Monitoring Systems, Communication Products and Converters, Data Acquisition and Analysis Software, Data Loggers Plug-in Cards, Signal Conditioners, USB, RS232, RS485 and Parallel Port Data Acquisition Systems, Wireless Transmitters and Receivers

• Pressure, Strain and Force

Displacement Transducers, Dynamic Measurement Force Sensors, Instrumentation for Pressure and Strain Measurements, Load Cells, Pressure Gauges, Pressure Reference Section, Pressure Switches, Pressure Transducers, Proximity Transducers, Regulators, Strain Gages, Torque Transducers, Valves

Heaters

Band Heaters, Cartridge Heaters, Circulation Heaters, Comfort Heaters, Controllers, Meters and Switching Devices, Flexible Heaters, General Test and Measurement Instruments, Heater Hook-up Wire, Heating Cable Systems, Immersion Heaters, Process Air and Duct, Heaters, Radiant Heaters, Strip Heaters, Tubular Heaters