


OMB-DBK25

8-Channel Relay-Output Card for OMB-LOGBOOK and DAQBOARD-2000 Series

Model OMB-DBK25

\$549

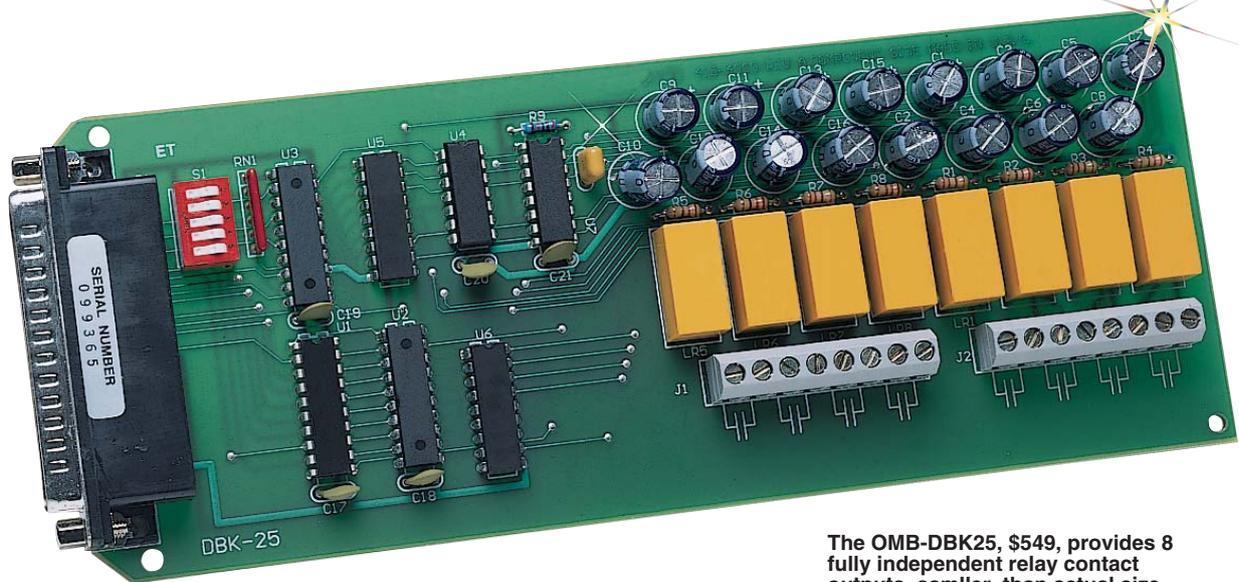

The OMB-DBK25, \$549, provides 8 fully independent relay contact outputs, smaller than actual size

- ✓ Provides Eight Independent Relay Contact Outputs
- ✓ Requires Minimal System Power

The OMB-DBK25 8-channel relay-output card provides OMEGA's OMB-LOGBOOK and OMB-DAQBOARD-2000 Series data acquisition systems with eight fully independent relay contact outputs. Because the OMB-DBK25 is designed for use in portable as well as desktop applications, it employs miniature latch relays that draw power only when changing states, *i.e.*, when changing from off to on or from on to off. This minimal power consumption makes the OMB-DBK25 ideal for applications

that rely on battery power. The OMB-DBK25 relay contacts are rated for 2 A at 28 Vdc or 0.6 A at 120 Vac. As many as twenty-four OMB-DBK25's can be used in one system, to obtain 192 outputs.

Specifications

Connectors: DB37 male, mates with P2 pinout on an OMB-LOGBOOK, OMB-DAQBOARD-2000 Series and OMB-DIGIBOOK-72 (attachment to the DAQBOARD's P2 further requires the use of an optional OMB-CA-60 cable)

Number of Channels: 8

Max. Number of Cards: 32

Contact Rating:

2 A @ 28 Vdc and
0.6 A @ 120 Vac

Isolation

Channel-to-System: 250 V
Channel-to-Channel: 150 V

Cables:

Use OMB-CA-37-x cable with OMB-LOGBOOK and OMB-DAQBOARD-2000 Series

<i>To Order (Specify Model Number)</i>		
Model Number	Price	Description
OMB-DBK25	\$549	8-Channel Relay-Output Card

Ordering Example: OMB-DBK25 is an 8-channel relay-output card, \$549.

omega.co.uk[®]

Your One-Stop Source for Process Measurement and Control!

Freephone 0800 488 488 | International +44(0) 161 777 6622 | Fax +44(0) 161 777 6622 | Sales@omega.co.uk

www.omega.co.uk



UNITED STATES

www.omega.com

1-800-TC-OMEGA

Stamford, CT.

CANADA

www.omega.ca

Laval(Quebec)

1-800-TC-OMEGA

GERMANY

www.omega.de

Deckenpfronn, Germany

0800-8266342

UNITED KINGDOM

www.omega.co.uk

Manchester, England

0800-488-488

FRANCE

www.omega.fr

088-466-342

CZECH REPUBLIC

www.omegaeng.cz

Karviná, Czech Republic

596-311-899

BENELUX

www.omega.nl

0800-099-33-44



More than 100,000 Products Available!

• Temperature

Calibrators, Connectors, General Test and Measurement Instruments, Handheld Instruments for Temperature Measurement, Ice Point References, Indicating Labels, Crayons, Cements and Lacquers, Infrared Temperature Measurement Instruments, Recorders, Relative Humidity Measurement Instruments, PT100 Probes, PT100 Elements, Temperature & Process Meters, Timers and Counters, Temperature and Process Controllers and Power Switching Devices, Thermistor Elements, Probes and Assemblies, Thermocouples, Thermowells and Head and Well Assemblies, Transmitters, Thermocouple Wire, RTD Probes

• Flow and Level

Air Velocity Indicators, Doppler Flowmeters, Level Measurement, Magnetic Flowmeters, Mass Flowmeters, Pitot Tubes, Pumps, Rotameters, Turbine and Paddle Wheel Flowmeters, Ultrasonic Flowmeters, Valves, Variable Area Flowmeters, Vortex Shedding Flowmeters

• pH and Conductivity

Conductivity Instrumentation, Dissolved Oxygen Instrumentation, Environmental Instrumentation, pH Electrodes and Instruments, Water and Soil Analysis Instrumentation

• Data Acquisition

Auto-Dialers and Alarm Monitoring Systems, Communication Products and Converters, Data Acquisition and Analysis Software, Data Loggers Plug-in Cards, Signal Conditioners, USB, RS232, RS485 and Parallel Port Data Acquisition Systems, Wireless Transmitters and Receivers

• Pressure, Strain and Force

Displacement Transducers, Dynamic Measurement Force Sensors, Instrumentation for Pressure and Strain Measurements, Load Cells, Pressure Gauges, Pressure Reference Section, Pressure Switches, Pressure Transducers, Proximity Transducers, Regulators, Pressure Transmitters, Strain Gauges, Torque Transducers, Valves

• Heaters

Band Heaters, Cartridge Heaters, Circulation Heaters, Comfort Heaters, Controllers, Meters and Switching Devices, Flexible Heaters, General Test and Measurement Instruments, Heater Hook-up Wire, Heating Cable Systems, Immersion Heaters, Process Air and Duct, Heaters, Radiant Heaters, Strip Heaters, Tubular Heaters