LEVEL TRACK MOUNTING SYSTEMS

\$55



- Adjustable In-Tank Mounting System
- Mounts Up to Four Sensors
- Mixer Compatible With Rotational Velocities of Up to 1.5 fps
- Optional Side Mount Bracket Conveniently Mounts the Track to Tank Wall
- Permits Different Sensing Technologies for Additional Safety
- Easy to Adjust with Changing Processes
- Integral Controller Options Available

OMEGA's level track system is an in-tank (unpressurized tanks only) mounting system that enables the user to install and adjust up to four OMEGA® sensors to any depth along the entire length of the track. The track is made entirely of polypropylene and is available in 0.6, 1.2 or 1.8 m (2, 4, 6, 8 or 10') lengths. Lengths of up to 1.8 m (10') can be special ordered.

Select the level track system for mixing applications with radial velocities up to 1.5 fps (feet per second). The track mounts vertically through the top of the tank with a standard 2 NPT tank adaptor. Each track kit includes a 2 NPT fitting assembly, a two, four or six foot track section, and one sensor car. Additional sensor cars can be purchased separately. Sensors are all sold separately.

LVM-11, \$55, shown smaller than actual size.

LVCN -12, \$50 optional, visit omega.com/lvcn11\_12

Use the LVM level track as part of an

#### **SPECIFICATIONS**

Track Length: Available in 0.6, 1.2 or 1.8 m

(2, 4, 6, 8 and 10')

Wetted Material: 20% glass filled Polypropylene (PP)

Mounting Threads: 2 NPT tank adaptor or side

mount bracket

Max. Temp. Rating: 90°C (194°F)

Sensor Car Adjustment: Along the entire length of track Mounting Orientation: Vertical Radial Velocities: Up to 1.5 fps

Dimensions: 2.5 cm (1") square by lengths of

0.6, 1.2 or 1.8 m (2, 4, 6, 8 and 10') **Side Mount Bracket:** 15 x 8.1 x 5 cm


(6 x 3.2 x 2")


Side Mount Bracket Mounting
Method: Bolted or welded to side wall


of tank


Available in 2, 4, 6, 8, or 10' Lengths



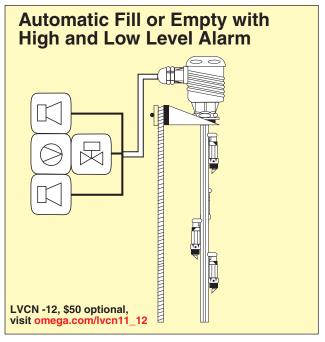

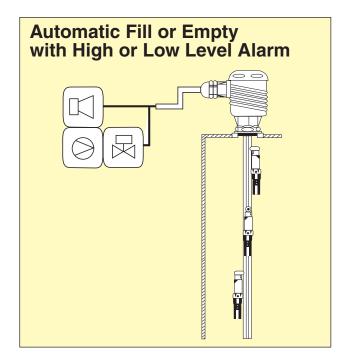

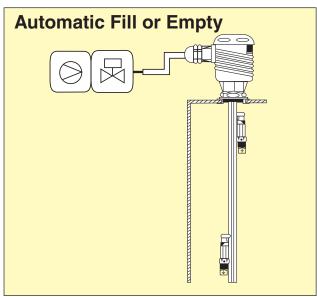

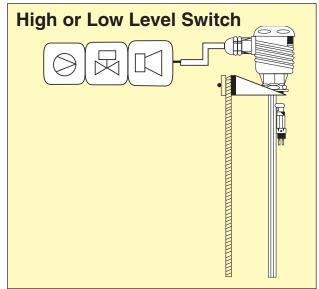

# Level Track Mounting Systems may be used with the following sensors:

•		
Item	Page	
LVU-150	K-33	
LVC-100	K-38	
LVV-110	K-65	

#### Accessory

•			
Model No.	Price	Description	
CM-1200	\$210	Reference Book: Hands On Water and Wastewater Equipment Maintenance Volume II	

## ■ MOST POPULAR MODELS HIGHLIGHTED!

To Order (Specify Model Number)				
Model No.	Price	Description	Size	
LVM-11	\$55	Level track kit	2' x 1" square	
LVM-12	75	Level track kit	4' x 1" square	
LVM-13	80	Level track kit	6' x 1" square	
LVM-14	115	Level track kit	8' x 1" square	
LVM-15	135	Level track kit	10' x 1" square	
LVM-20	20	Sensor car kit	2 x 1"	
LVM-30	30	Side mount bracket	6 x 3.2 x 2"	
LVCN-11	60	4 sensor electrical housing	2.8 x 4.5 x 3/4 NPT	
LVCN-12	50	2 sensor electrical housing	2.8 x 3.5 x ¾ NPT	

Comes complete with operator's manual.

Track comes with 2 NPT fitting and one sensor car. Sensors sold separately.

**Ordering Examples: LVM-11,** 2' track kit, plus **LVM-20,** sensor car kit, plus **LVM-30,** side mount bracket, \$55 + 20 + 30 = \$105.

**LVM-12,** 4' track kit, two **LVM-20** sensor car kits, **LVCN-12**, electrical housing,  $$75 + (2 \times 20) + 50 = $165$ .

# omega.co.uk®

Your One-Stop Source for Process Measurement and Control!

## www.omega.co.uk



# UNITED STATES

www.omega.com 1-800-TC-OMEGA Stamford, CT.

#### **CANADA**

www.omega.ca Laval(Quebec) 1-800-TC-OMEGA

#### **GERMANY**

www.omega.de Deckenpfronn, Germany 0800-8266342

### **UNITED KINGDOM**

Freephone 0800 488 488 | International +44(0) 161 777 6622 | Fax +44(0) 161 777 6622

www. omega.co.uk Manchester, England 0800-488-488 +44-(0)161-777-6611

#### **FRANCE**

www.omega.fr 0800-466-342

#### **BENELUX**

www.omega.nl 0800-099-33-44



Sales@omega.co.uk

# More than 100,000 Products Available!

## Temperature

Calibrators, Connectors, General Test and Measurement Instruments, Handheld Instruments for Temperature Measurement, Ice Point References, Indicating Labels, Crayons, Cements and Lacquers, Infrared Temperature Measurement Instruments, Recorders, Relative Humidity Measurement Instruments, PT100 Probes, PT100 Elements, Temperature & Process Meters, Timers and Counters, Temperature and Process Controllers and Power Switching Devices, Thermistor Elements, Probes and Assemblies, Thermocouples, Thermowells and Head and Well Assemblies, Transmitters, Thermocouple Wire, RTD Probes

### Flow and Level

Air Velocity Indicators, Doppler Flowmeters, Level Measurement, Magnetic Flowmeters, Mass Flowmeters, Pitot Tubes, Pumps, Rotameters, Turbine and Paddle Wheel Flowmeters, Ultrasonic Flowmeters, Valves, Variable Area Flowmeters, Vortex Shedding Flowmeters

## pH and Conductivity

Conductivity Instrumentation, Dissolved Oxygen Instrumentation, Environmental Instrumentation, pH Electrodes and Instruments, Water and Soil Analysis Instrumentation

## Data Acquisition

Communication Products and Converters, Data Acquisition and Analysis Software, Data Loggers Plug-in Cards, Signal Conditioners, USB, RS232, RS485, Ehernet and Parallel Port Data Acquisition Systems, Wireless Transmitters and Receivers

### Pressure, Strain and Force

Displacement Transducers, Dynamic Measurement Force Sensors, Instrumentation for Pressure and Strain Measurements, Load Cells, Pressure Gauges, Pressure Reference Section, Pressure Switches, Pressure Transducers, Proximity Transducers, Regulators, Pressure Transmitters, Strain Gauges, Torque Transducers, Valves

#### Heaters

Band Heaters, Cartridge Heaters, Circulation Heaters, Comfort Heaters, Controllers, Meters and Switching Devices, Flexible Heaters, General Test and Measurement Instruments, Heater Hook-up Wire, Heating Cable Systems, Immersion Heaters, Process Air and Duct, Heaters, Radiant Heaters, Strip Heaters, Tubular Heaters