

# ECONOMICAL LIQUID-LEVEL TRANSMITTERS

Suitable for Levels to 6 Feet

LVR20/30 Series  
Starts at

**\$633**



- ✓ Rugged Stainless Steel Construction
- ✓ 4 to 20 mA or Resistance Output
- ✓ Immune to Density and Dielectric Changes
- ✓ ¼" Resolution

The OMEGA® LVR20 and LVR30 Series continuous liquid-level sensors operate on a basic voltage divider network principle. As the float rises, a magnet in the float closes a series of reed switches in sequence, which varies the tapped-off portion of the voltage divider resistor network. The LVR20 has the basic voltage divider output—the regulated DC voltage input equals the maximum voltage output. The LVR20 has a nominal 1200 resistance; thus, with a 10 Vdc supply, 8.3 mA of current is required.

The OMEGA® DPF52 or DP24-E panel meters can be used to power and display the resistance from the LVR20; when relays are required, the DP25E-A meter can be used. For maximum accuracy, the readout device for the LVR20 should be zero and span adjusted after wiring is completed to compensate for any effects caused by the resistance of the lead-wires. The LVR20 can also be made intrinsically safe when used with OMEGA's intrinsic safety barriers and when properly powered. The LVR30 Series features a signal conditioner that provides a 4 to 20 mA output when powered by 10 to 30 Vdc. The LVR30 transmitters cannot be made intrinsically safe.

All LVR30 units come with a J-box with screw terminal connections. LVR20 units do not come with a J-box but have 24 inches of bare wire coming out of the top of the unit

with a ½ MNPT conduit connection. All LVR20 and LVR30 Series units can be wired for increasing output with either increasing or decreasing height of liquid; standard output is increasing output with increasing height. For other lengths, adaptor systems are available. These consist of 2 parts: the LVR-C coupling (2 x 2 FNPT) and an LVR-A pipe nipple (2 x 2 MNPT) of various lengths to change the insertion depth of the LVR20 or LVR30 sensor. When using the adaptors, a zero offset is introduced into the output signal, which must be compensated for in the readout device (for example, the mA signal, will not go down to 4 mA, nor will the voltage output go down to zero).

Retaining clip pliers are required to remove the float when using the adaptor system.

## SPECIFICATIONS

**Wetted Parts:** 316 SS stem and mounting, 316 SS float, 18-8 SS float stop

**Liquid Temperature:**  
-40 to 110°C (-40 to 230°F)

**Minimum Liquid Specific Gravity:**  
0.75

**Ambient Operating Temperature:**  
LVR20: -40 to 110°C (-40 to 230°F)  
LVR30: -15 to 71°C (5 to 160°F)

**LVR30 Temperature Coefficient:**  
±0.00388% FS/°F

**Storage Temperature:**  
LVR20: -40 to 110°C (-40 to 230°F)  
LVR30: -40 to 100°C (-40 to 212°F)

**Max Operating Pressure:** 300 psig

**Operating Voltage:**  
LVR30: 10 to 40 Vdc  
LVR20: 5 to 30 Vdc

**LVR30 Loop Impedance:** (Volts in - 10)  
x 46.66 = Ω with 24 Vdc power, max  
loop impedance = 653 Ω

**Connections:** LVR30 is 2-wire;  
LVR20 is 3-wire

**Accuracy:**  
LVR30:  
0.4% of FS or ±½", whichever is greater  
LVR20: ±½"

**Weights:**  
LVR30: 5 lb + ¼ lb per foot  
LVR20: 1¼ lb + ¼ lb per foot  
LVR-C: 1¼ lb



LVR-31, \$769,  
shown smaller  
than actual size.

## DIMENSIONS FOR LVR20 AND LVR30

**A:** Float travel = indicating length  
 $\frac{3}{8}'' \pm \frac{1}{4}''$


**B:** Stem length = indicating length  
 $3\frac{9}{16}'' \pm \frac{1}{16}''$

**C:** Distance to float stop = 6.4 mm  
 $(\frac{1}{4}'' ) \pm \frac{1}{16}''$


**D:** 39.7 mm ( $1\frac{9}{16}''$ )

**E:** 44.5 mm ( $1\frac{3}{4}''$ )  
 (assumes 1.0 SG fluid)

## Assembly Dimensions

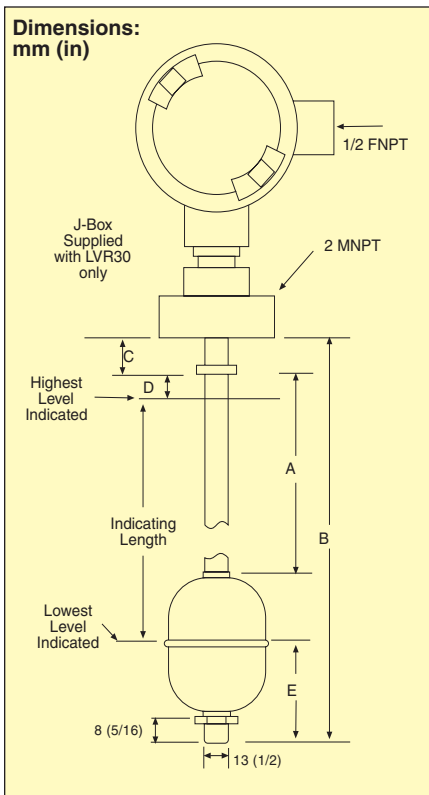

## Float

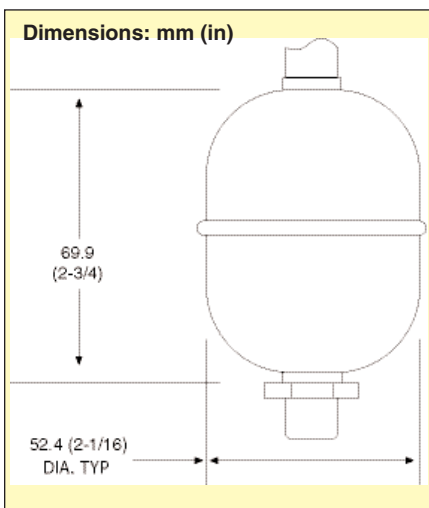

Use the LVR20 and LVR30 transmitters with the DPF50 Series indicators. See section M for details.

**MOST POPULAR MODELS HIGHLIGHTED!**

## To Order (Specify Model Number)

Isolated 4 to 20 mA Output		Voltage Divider Voltage in = Voltage out		
Model No.	Price	Model No.	Price	Indicating Length
LVR31	\$769	LVR21	\$633	1 ft
LVR32	914	LVR22	779	2 ft
LVR33	1055	LVR23	930	3 ft
LVR34	1204	LVR24	1075	4 ft
LVR35	1355	LVR25	1216	5 ft
LVR36	1499	LVR26	1386	6 ft

**Ordering Example:** LVR22, 304 SS level sensor with 0.6 m (2') long indicating length, nominal 0 to 1200  $\Omega$  resistance change and a 2 MNPT mounting thread, \$779.

## Pipe Nipples, 304 SS, 150 lb fittings, 2 x 2 MNPT

Model No.	Price	Weight (lb)	Indicating Length Change
LVR-A4	\$12	1 $\frac{1}{4}$	4"
LVR-A5	20	1 $\frac{1}{2}$	5"
LVR-A6	19	1 $\frac{3}{4}$	6"
LVR-A7	30	2	7"
LVR-A9	32	2 $\frac{1}{2}$	9"
LVR-A11	37	3	11"
LVR-A13	43	3 $\frac{1}{2}$	13"



LVR-A4, \$12, shown smaller than actual size.

LVR-C, \$40, shown smaller than actual size.

## 150 lb, 304 SS Coupling, 2 x 2 MNPT

Model No.	Price
LVR-C	\$40



# omega.co.uk<sup>®</sup>

Your One-Stop Source for Process Measurement and Control!

Freephone 0800 488 488 | International +44(0) 161 777 6622 | Fax +44(0) 161 777 6622 | Sales@omega.co.uk

[www.omega.co.uk](http://www.omega.co.uk)



#### UNITED STATES

[www.omega.com](http://www.omega.com)

1-800-TC-OMEGA  
Stamford, CT.

#### UNITED KINGDOM

[www.omega.co.uk](http://www.omega.co.uk)

Manchester, England  
0800-488-488  
+44-(0)161-777-6611

#### CANADA

[www.omega.ca](http://www.omega.ca)

Laval(Quebec)  
1-800-TC-OMEGA

#### FRANCE

[www.omega.fr](http://www.omega.fr)

0800-466-342

#### GERMANY

[www.omega.de](http://www.omega.de)

Deckenfronn, Germany  
0800-8266342

#### BENELUX

[www.omega.nl](http://www.omega.nl)

0800-099-33-44



## More than 100,000 Products Available!

### • Temperature

Calibrators, Connectors, General Test and Measurement Instruments, Handheld Instruments for Temperature Measurement, Ice Point References, Indicating Labels, Crayons, Cements and Lacquers, Infrared Temperature Measurement Instruments, Recorders, Relative Humidity Measurement Instruments, PT100 Probes, PT100 Elements, Temperature & Process Meters, Timers and Counters, Temperature and Process Controllers and Power Switching Devices, Thermistor Elements, Probes and Assemblies, Thermocouples, Thermowells and Head and Well Assemblies, Transmitters, Thermocouple Wire, RTD Probes

### • Flow and Level

Air Velocity Indicators, Doppler Flowmeters, Level Measurement, Magnetic Flowmeters, Mass Flowmeters, Pitot Tubes, Pumps, Rotameters, Turbine and Paddle Wheel Flowmeters, Ultrasonic Flowmeters, Valves, Variable Area Flowmeters, Vortex Shedding Flowmeters

### • pH and Conductivity

Conductivity Instrumentation, Dissolved Oxygen Instrumentation, Environmental Instrumentation, pH Electrodes and Instruments, Water and Soil Analysis Instrumentation

### • Data Acquisition

Communication Products and Converters, Data Acquisition and Analysis Software, Data Loggers Plug-in Cards, Signal Conditioners, USB, RS232, RS485, Ethernet and Parallel Port Data Acquisition Systems, Wireless Transmitters and Receivers

### • Pressure, Strain and Force

Displacement Transducers, Dynamic Measurement Force Sensors, Instrumentation for Pressure and Strain Measurements, Load Cells, Pressure Gauges, Pressure Reference Section, Pressure Switches, Pressure Transducers, Proximity Transducers, Regulators, Pressure Transmitters, Strain Gauges, Torque Transducers, Valves

### • Heaters

Band Heaters, Cartridge Heaters, Circulation Heaters, Comfort Heaters, Controllers, Meters and Switching Devices, Flexible Heaters, General Test and Measurement Instruments, Heater Hook-up Wire, Heating Cable Systems, Immersion Heaters, Process Air and Duct, Heaters, Radiant Heaters, Strip Heaters, Tubular Heaters