# NON-CONTACT LINEAR **DISPLACEMENT SENSORS** *12 AND 30 mm HOUSINGS*



- Compact Design
- ✓ IP67 Protection Rating

Non-contact linear sensors have an analog output that is proportional to the damping target distance. Their compact yet sturdy design makes them suitable for industrial, robotics, and laboratory use.

These sensors use inductive technology, which means they can sense any metal target. The sensing distance, however, is influenced by the metal target. Ranges are calibrated using a standard square target. The target is mild steel (Fe 360), 1 mm (0.04") thick. The side lengths are the larger of either the sensor's face diaphragm or 3 times the sensing distance.

metals other than mild steel. The "Correction Factors" chart, shown below, shows the reduction that occurs when brass or other target metals are used. For example, if the target were brass, the LD701-1/2 would sense 0.5 to 1 mm (0.02 to 0.04").

The voltage output generated is directly linear to the distance being measured. The output can be read by panel meters, recorders, computer boards, or data loggers, all of which are available from OMEGA®.

#### SPECIFICATIONS

Excitation: 14 to 30 Vdc @ 20 mA: unregulated, reverse polarity and short circuit protected

Output: 1 to 9 Vdc Output Load: 20 mA max Repeatability: 0.01 mm (0.0004") Compensated Temperature: 0 to 60°C (32 to 140°F)

Total Thermal Effects: 1μm/°C/mm Housing: Nickel-plated brass Electrical Connection: 1.8 m (6'). 3-conductor, 22 AWG pigtail leads

(20 AWG for 30 mm)

CORRECTION FACTORS				
MATERIAL	APPROX.			
Mild steel	1.0			
Stainless steel	0.75			
Brass	0.50			
Aluminum	0.40			
Copper	0.35			

# NON-CONTACT LINEAR DISPLACEMENT SENSORS





MODEL NO.	THREAD A	NUT B	С	D
LD701-1/2	M12x1	SW17	51 (2.01)	10 (0.39)
LD701-2/5	M18x1	SW24	65 (2.55)	10 (0.39)
LD701-5/10	M30x1.5	SW36	60 (2.36)	10 (0.39)

Wiring: brown +exc; black +out; blue common.

#### AVAILABLE FOR FAST DELIVERY!

To Order <i>(Specify Model Number)</i>						
MODEL	LD701-1/2	LD701-2/5	LD701-5/10			
PRICE	\$195	\$215	\$250			
RANGE mm (in)	1 to 2 (0.04 to 0.08)	2 to 5 (0.08 to 0.19)	5 to 10 (0.19 to 0.39)			
REPEATABILITY	±10 μm (0.4 μin)	±10 μm (0.4 μin)	±10 μm (0.4 μin)			
LINEARITY	±4%	±2%	±4%			
SWITCHING FREQUENCY (-3 dB)	1000 Hz	1000 Hz	500 Hz			
HOUSING SIZE	12 mm (0.47")	18 mm (0.71")	30 mm (1.2")			
COMPATIBLE METERS*	DP25B-E, DP41-E, DP3002-E, DP24-E					


#### **ACCESSORIES**

MODEL NO.	PRICE	DESCRIPTION		
MBL-8/12	\$10	Mounting bracket for LD701-1/2		
MBL-18/30	10	Mounting bracket for LD701-5/10		
EE-2590	190	Reference Book: Measurement Instrumentation and Sensors Handbook		

Comes with complete operator's manual.

Ordering Example: LD701-1/2, non-contact displacement sensor with 1 to 2 mm (0.04 to 0.08") range, \$195.



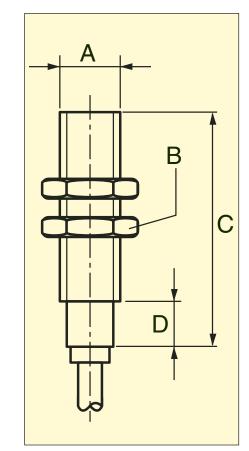

<sup>\*</sup> See section D for compatible meters.

# omega.co.uk®

Your One-Stop Source for Process Measurement and Control!

# www.omega.co.uk



# UNITED STATES

www.omega.com 1-800-TC-OMEGA Stamford, CT.

#### **CANADA**

www.omega.ca Laval(Quebec) 1-800-TC-OMEGA

#### **GERMANY**

www.omega.de Deckenpfronn, Germany 0800-8266342

### **UNITED KINGDOM**

Freephone 0800 488 488 | International +44(0) 161 777 6622 | Fax +44(0) 161 777 6622

www. omega.co.uk Manchester, England 0800-488-488 +44-(0)161-777-6611

#### **FRANCE**

www.omega.fr 0800-466-342

#### **BENELUX**

www.omega.nl 0800-099-33-44



Sales@omega.co.uk

# More than 100,000 Products Available!

## Temperature

Calibrators, Connectors, General Test and Measurement Instruments, Handheld Instruments for Temperature Measurement, Ice Point References, Indicating Labels, Crayons, Cements and Lacquers, Infrared Temperature Measurement Instruments, Recorders, Relative Humidity Measurement Instruments, PT100 Probes, PT100 Elements, Temperature & Process Meters, Timers and Counters, Temperature and Process Controllers and Power Switching Devices, Thermistor Elements, Probes and Assemblies, Thermocouples, Thermowells and Head and Well Assemblies, Transmitters, Thermocouple Wire, RTD Probes

### Flow and Level

Air Velocity Indicators, Doppler Flowmeters, Level Measurement, Magnetic Flowmeters, Mass Flowmeters, Pitot Tubes, Pumps, Rotameters, Turbine and Paddle Wheel Flowmeters, Ultrasonic Flowmeters, Valves, Variable Area Flowmeters, Vortex Shedding Flowmeters

# pH and Conductivity

Conductivity Instrumentation, Dissolved Oxygen Instrumentation, Environmental Instrumentation, pH Electrodes and Instruments, Water and Soil Analysis Instrumentation

# Data Acquisition

Communication Products and Converters, Data Acquisition and Analysis Software, Data Loggers Plug-in Cards, Signal Conditioners, USB, RS232, RS485, Ehernet and Parallel Port Data Acquisition Systems, Wireless Transmitters and Receivers

### Pressure, Strain and Force

Displacement Transducers, Dynamic Measurement Force Sensors, Instrumentation for Pressure and Strain Measurements, Load Cells, Pressure Gauges, Pressure Reference Section, Pressure Switches, Pressure Transducers, Proximity Transducers, Regulators, Pressure Transmitters, Strain Gauges, Torque Transducers, Valves

#### Heaters

Band Heaters, Cartridge Heaters, Circulation Heaters, Comfort Heaters, Controllers, Meters and Switching Devices, Flexible Heaters, General Test and Measurement Instruments, Heater Hook-up Wire, Heating Cable Systems, Immersion Heaters, Process Air and Duct, Heaters, Radiant Heaters, Strip Heaters, Tubular Heaters