

20 scfm at 100 psig

PRG300 Series



- Compact Light Weight Construction
- ✓ Low Air Consumption
- Rugged Corrosion Resistant Design
- Direct, Pipe or Bracket Mounting
- ✓ 40 Micron Filter
- Built in Gauge Port and Bleed Valve
- Available with ½ or ¼ NPT Fittings

The PRG300 instrument air filter regulator is designed to provide clean, accurate air pressure to instruments, valves, and other automatic control equipment. This filter regulator has been proven to provide accurate operating characteristics under variable conditions. Durable materials and a standard epoxy paint finish provide long lasting corrosion resistance in harsh industrial environments.

The PRG300 has ¼ NPT inlet and outlet fittings and the PRG320's have ½ NPT fittings for higher flow rates. Both include a ¼ NPT gauge port.

SPECIFCATIONS

Maximum Supply Pressure: 17 bar

(250 psi)

Supply Pressure Effect: < 0.25 psi for

25 psi change

Exhaust Capacity: 0.1 SCFM (outlet

pressure 5 psig > setpoint)

Cv Values:

PRG300: 0.5 at 150 psi supply and

80 psi setpoint

PRG320: 2.5 at 150 psi supply and


80 psi setpoint

Sensitivity: 1 inH₂O

Air Consumption: Less than 5 SCFH

Temperature Limits: -18 to 71°C (0 to 160°F)

Filter: 40 micron
Port Sizes (In/Out):
PRG300: ¼ NPT female
PRG320: ½ NPT female
Gauge Port: ¼ NPT female

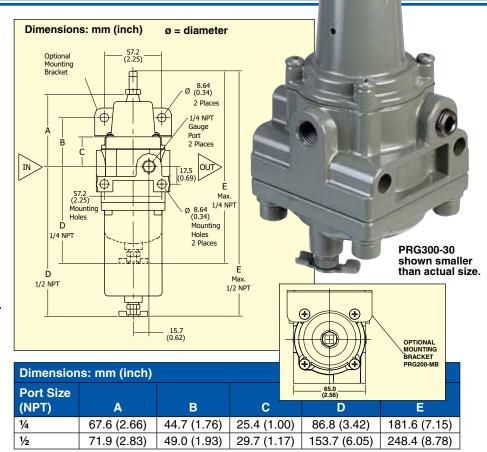

Mounting: Pipe, panel, through body or optional bracket

Weight:

PRG300: 0.45 kg (1.2 lbs) **PRG320:** 0.64 kg (1.71 lbs)

Materials

Body: Diecast aluminum alloy, irridite and baked epoxy finish

Filter: Phenolic impregnated cellulose **Diaphragm:** Nitrile elastomer and nylon

fabric

Valve Seat Plug: Nitrile elastomer Additional Materials: Brass, zinc

plated steel, acetal

To Order Visit omega.com/prg300 for Pricing and Details			
	OUTPUT PRESSURE RANGE		
MODEL NO.	psi	bar	IN/OUT FITTINGS
PRG300-30	0 to 30	0 to 2.1	¼ NPTF
PRG300-60	0 to 60	0 to 4.1	¼ NPTF
PRG300-120	0 to 120	0 to 8.3	¼ NPTF
PRG320-30	0 to 30	0 to 2.1	½ NPTF
PRG320-6	0 to 60	0 to 4.1	½ NPTF
PRG320-120	0 to 120	0 to 8.3	½ NPTF

ACCESSORY

MODEL NO.	DESCRIPTION
PRG200-MB	Mounting bracket

Comes complete with operator's manual.

Ordering Example: PRG300-30, air filter regulator with 0 to 30 psi range.