



FREE Software For CN8200, CN8240 and CN8260 Series Controllers

CN8-SW
FREE

- ✓ Communications Software Designed for Either RS232 or RS485
- ✓ Remote Setpoint Adjustment
- ✓ Instrument Configuration
- ✓ Settings Saved to File
- ✓ Instrument Program Cloning
- ✓ Logging and Charting
- ✓ Live Display
- ✓ Password Security
- ✓ Print Options
- ✓ Software Can Support Up to 254 CN8200, CN8240 or CN8260 Controllers

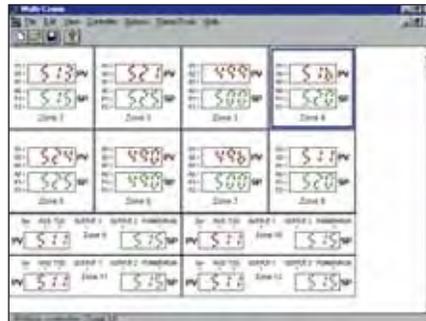

Sample of screen displaying status of multiple controllers.

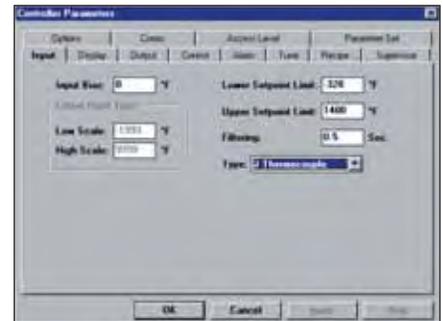

Sample of screen displaying controller parameters.

The CN8-SW software is designed to interface with the CN8200, CN8240 and CN8260 series controllers with optional communication hardware. Designed for use on laptops or PC's, this new development provides the user with:

- Time saving benefit and convenience of remotely configuring and adjusting units.
- Saving and retrieving settings to and from files.
- Cloning settings to other instruments.
- Highly flexible logging and "real time" charting capability for providing hard copy QA records for ISO-9000 and other management purposes.

The CN8-SW software is a powerful process development tool for the OEM customer or process engineer. With compatible modems and PC computers, remote site supervisory control and data acquisition can take place to facilitate periodic or continuous monitoring and troubleshooting.

Data is stored to file in a tamper resistant format to ensure the integrity of reports for quality monitoring requirements. Build your own multi-loop system with the CN8200/CN8240/CN8260 series controllers and CN8-SW software. Allows both local and remote adjustment. The CN8-SW software can be used as a production tool for the OEM. Downloading menu settings to controllers during production saves time and eliminates errors.

Hardware and Software Requirements

The computer used to run the CN8-SW software must meet the following requirements:

- 486SX or better processor
- 1 MB of disk space for CN8-SW software (plus additional space for log files).

- Windows 95/98/NT
- Available COM (serial) port or RS485 port. Communication between the PC and an RS485 network can be accomplished using a COM port and an RS232-to-RS485 converter. Communication with a single controller using a COM port for an RS232 link does not require a converter, but does require a cable adaptor.

AVAILABLE FOR FAST DELIVERY!

To Order (Specify Model No.)

Model No.	Price	Description
CN8-SW	N/C	Software

Includes 2 folders, 1 for standard and 1 for modbus protocols. Software can be downloaded from the OMEGA® website; please visit omega.com.

omega.co.uk[®]

Your One-Stop Source for Process Measurement and Control!

Freephone 0800 488 488 | International +44(0) 161 777 6622 | Fax +44(0) 161 777 6622 | Sales@omega.co.uk

www.omega.co.uk



UNITED STATES

www.omega.com

1-800-TC-OMEGA
Stamford, CT.

UNITED KINGDOM

www.omega.co.uk

Manchester, England
0800-488-488
+44-(0)161-777-6611

CANADA

www.omega.ca

Laval(Quebec)
1-800-TC-OMEGA

FRANCE

www.omega.fr

0800-466-342

GERMANY

www.omega.de

Deckenfronn, Germany
0800-8266342

BENELUX

www.omega.nl

0800-099-33-44



More than 100,000 Products Available!

• Temperature

Calibrators, Connectors, General Test and Measurement Instruments, Handheld Instruments for Temperature Measurement, Ice Point References, Indicating Labels, Crayons, Cements and Lacquers, Infrared Temperature Measurement Instruments, Recorders, Relative Humidity Measurement Instruments, PT100 Probes, PT100 Elements, Temperature & Process Meters, Timers and Counters, Temperature and Process Controllers and Power Switching Devices, Thermistor Elements, Probes and Assemblies, Thermocouples, Thermowells and Head and Well Assemblies, Transmitters, Thermocouple Wire, RTD Probes

• Flow and Level

Air Velocity Indicators, Doppler Flowmeters, Level Measurement, Magnetic Flowmeters, Mass Flowmeters, Pitot Tubes, Pumps, Rotameters, Turbine and Paddle Wheel Flowmeters, Ultrasonic Flowmeters, Valves, Variable Area Flowmeters, Vortex Shedding Flowmeters

• pH and Conductivity

Conductivity Instrumentation, Dissolved Oxygen Instrumentation, Environmental Instrumentation, pH Electrodes and Instruments, Water and Soil Analysis Instrumentation

• Data Acquisition

Communication Products and Converters, Data Acquisition and Analysis Software, Data Loggers Plug-in Cards, Signal Conditioners, USB, RS232, RS485, Ethernet and Parallel Port Data Acquisition Systems, Wireless Transmitters and Receivers

• Pressure, Strain and Force

Displacement Transducers, Dynamic Measurement Force Sensors, Instrumentation for Pressure and Strain Measurements, Load Cells, Pressure Gauges, Pressure Reference Section, Pressure Switches, Pressure Transducers, Proximity Transducers, Regulators, Pressure Transmitters, Strain Gauges, Torque Transducers, Valves

• Heaters

Band Heaters, Cartridge Heaters, Circulation Heaters, Comfort Heaters, Controllers, Meters and Switching Devices, Flexible Heaters, General Test and Measurement Instruments, Heater Hook-up Wire, Heating Cable Systems, Immersion Heaters, Process Air and Duct, Heaters, Radiant Heaters, Strip Heaters, Tubular Heaters