



Fiber Optic Thermometer



FOB102, \$3495,
shown actual size.

FOB100
Starts at
\$2995



- ✓ **NIST Certificate Included**
- ✓ **1, 2, or 4 Channels**
- ✓ **Large Display**
- ✓ **No Calibration Required**
- ✓ **Voltage or Current Output**
- ✓ **RS232 or Optional Software Available**
- ✓ **Ideal for Microwave-Type Applications**

The FOB100 Series comprises high-accuracy, multipurpose fiber optic thermometers with 1, 2, or 4 channels. They use an original algorithm to analyze incoming signals, measuring the temperature on each channel.

The standard analog output is 0 to 10 V; 4 to 20 mA is optional. Sensors are sold separately in various cable lengths (see "To Order" chart), are interchangeable, and do not require calibration. With the optional FOB100-SOFT software for Windows (see "Accessories"), the user can download data to a PC via the RS232 communications port on the front panel. Software features include min/max alarm; full data logging functions; and bar-graph, trend-line, or statistics display. The FOB100's rugged enclosure and immunity to EMI/RFI interference make it ideal for demanding industrial and laboratory applications.

Specifications

Number of Channels: 1, 2 or 4

Resolution: 0.1°C (0.2°F)

Precision: ±0.8°C (1.6°F) or 1% FS

Response Time:

Single-Channel Version:

10 Hz sampling rate

2- and 4-Channel Versions:

250 ms switching rate between each channel

Operating Temperature:

0 to 50°C (32 to 122°F)



Storage Temperature:

-20 to 60°C (-4 to 140°F)

Display: VFD, 2 lines x 16 characters

Communication Port: RS232

Operating Mode: Front panel, FOB100-SOFT PC software (optional) or RS232 commands

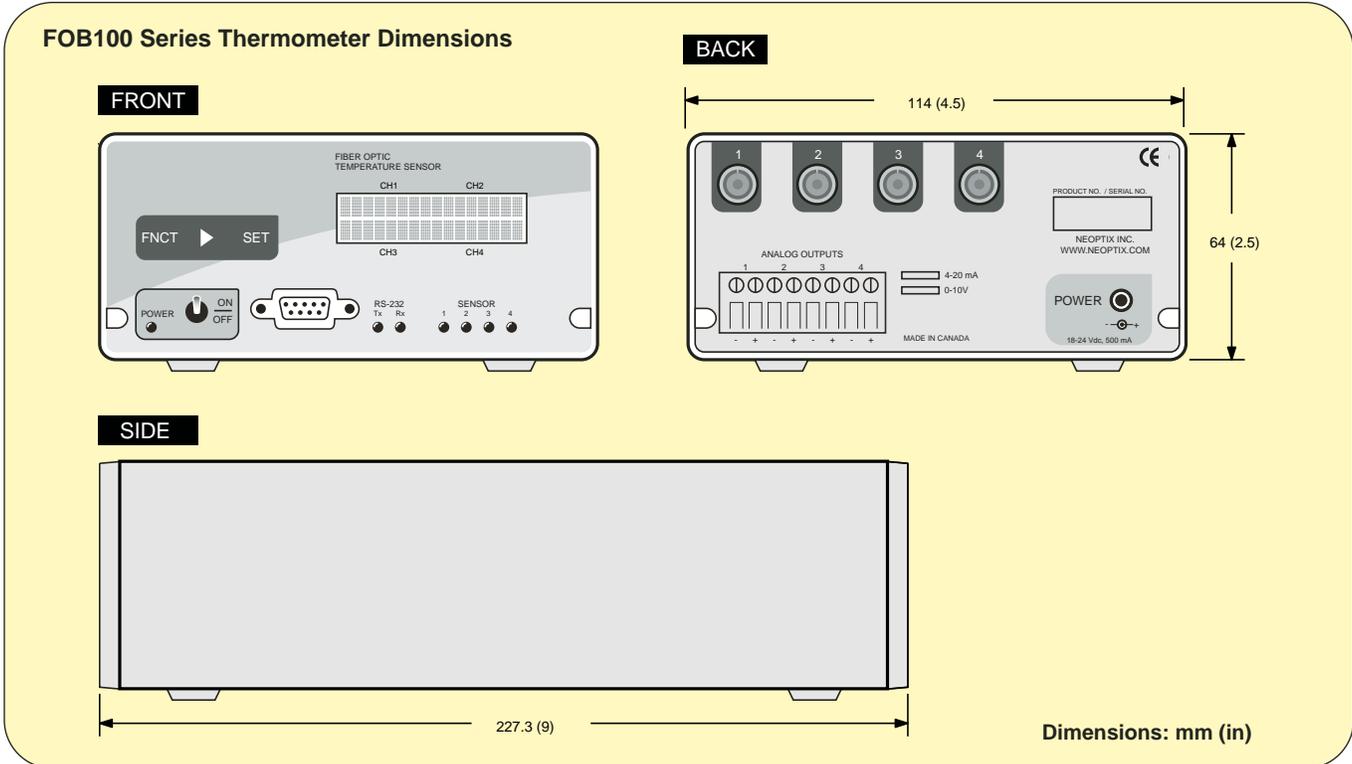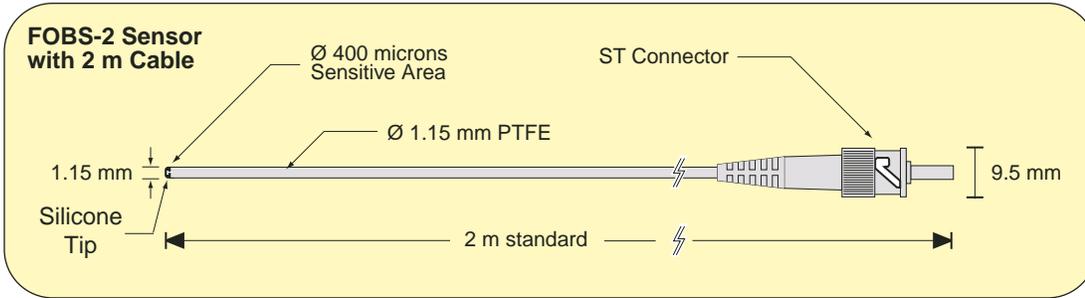

MOST POPULAR MODELS HIGHLIGHTED!

Analog Outputs:

- Standard: 0 to 10 V (4)
- Optional: 4 to 20 mA
- Power: 18 to 24 Vdc, 8 W (included)
- Dimensions: 141.4 W x 64.0 H x 227.3 mm L (5.57 x 2.52 x 8.95")
- Weight: 1.2 kg (2.6 lb)

Probe Specifications

- Temperature Range: -80 to 250°C (-112 to 482°F); cryogenic range available (down to 5 Kelvins)
- Resolution: 0.1°C (0.2°F)
- Accuracy: ±1°C or 1% FS
- Response Time: 250 ms or faster



To Order (Specify Model Number)		
Model No.	Price	Description
FOB101	\$2995	1-channel fiber optic benchtop thermometer
FOB102	3495	2-channel fiber optic benchtop thermometer
FOB104	3995	4-channel fiber optic benchtop thermometer
Model No.	Price	Required Sensors
FOBS-2	\$249	Sensor with 2 m (6.5') cable
FOBS-10	377	Sensor with 10 m (33') cable
FOBS-20	537	Sensor with 20 m (66') cable
FOBS-30	697	Sensor with 30 m (98') cable**

Note: For corrosive environments, add "-PTFE" to the model number and add \$50 to price.

Accessories

Model No.	Price	Description
FOB100-SOFT	\$395	Windows software and RS232 cable
FOBS-CAB-(*)	100	Polyurethane, sensor extension cable, 2 m (6.5')

* Add number of meters. Each additional meter over 2, add \$15 per meter.

** Maximum available length is 30 m (98').

Comes with complete operator's manual, NIST certificate, and 120 to 240 Vac, 50/60 Hz power supply.

To change the 0 to 10 V output to a 4 to 20 mA output, add "-PV" to the model number, no additional charge.

Ordering Example: FOB101, 1-channel benchtop fiber optic thermometer, FOBS-2, 2 m (6.6') cable temperature sensor, \$2995 + 249 = \$3244.



omega.co.uk[®]

Your One-Stop Source for Process Measurement and Control!

Freephone 0800 488 488 | International +44(0) 161 777 6622 | Fax +44(0) 161 777 6622 | Sales@omega.co.uk

www.omega.co.uk



UNITED STATES

www.omega.com

1-800-TC-OMEGA
Stamford, CT.

UNITED KINGDOM

www.omega.co.uk

Manchester, England
0800-488-488
+44-(0)161-777-6611

CANADA

www.omega.ca

Laval(Quebec)
1-800-TC-OMEGA

FRANCE

www.omega.fr

0800-466-342

GERMANY

www.omega.de

Deckenfronn, Germany
0800-8266342

BENELUX

www.omega.nl

0800-099-33-44



More than 100,000 Products Available!

• Temperature

Calibrators, Connectors, General Test and Measurement Instruments, Handheld Instruments for Temperature Measurement, Ice Point References, Indicating Labels, Crayons, Cements and Lacquers, Infrared Temperature Measurement Instruments, Recorders, Relative Humidity Measurement Instruments, PT100 Probes, PT100 Elements, Temperature & Process Meters, Timers and Counters, Temperature and Process Controllers and Power Switching Devices, Thermistor Elements, Probes and Assemblies, Thermocouples, Thermowells and Head and Well Assemblies, Transmitters, Thermocouple Wire, RTD Probes

• Flow and Level

Air Velocity Indicators, Doppler Flowmeters, Level Measurement, Magnetic Flowmeters, Mass Flowmeters, Pitot Tubes, Pumps, Rotameters, Turbine and Paddle Wheel Flowmeters, Ultrasonic Flowmeters, Valves, Variable Area Flowmeters, Vortex Shedding Flowmeters

• pH and Conductivity

Conductivity Instrumentation, Dissolved Oxygen Instrumentation, Environmental Instrumentation, pH Electrodes and Instruments, Water and Soil Analysis Instrumentation

• Data Acquisition

Communication Products and Converters, Data Acquisition and Analysis Software, Data Loggers Plug-in Cards, Signal Conditioners, USB, RS232, RS485, Ethernet and Parallel Port Data Acquisition Systems, Wireless Transmitters and Receivers

• Pressure, Strain and Force

Displacement Transducers, Dynamic Measurement Force Sensors, Instrumentation for Pressure and Strain Measurements, Load Cells, Pressure Gauges, Pressure Reference Section, Pressure Switches, Pressure Transducers, Proximity Transducers, Regulators, Pressure Transmitters, Strain Gauges, Torque Transducers, Valves

• Heaters

Band Heaters, Cartridge Heaters, Circulation Heaters, Comfort Heaters, Controllers, Meters and Switching Devices, Flexible Heaters, General Test and Measurement Instruments, Heater Hook-up Wire, Heating Cable Systems, Immersion Heaters, Process Air and Duct, Heaters, Radiant Heaters, Strip Heaters, Tubular Heaters