# SANITARY THERMOCOUPLE ASSEMBLIES

Heavy-Duty—With Integral Cable

10' (120") of PFA insulated and jacketed #24 AWG thermocouple cable standard.

TCS-H-CB-120 Series



All Models


Heavy-Duty Probe Design With Stepped Probe Stem for Additional Strength

- ✓ 1½" 16 AMP Tri-Grip™ (Tri-Clamp® Compatible) Fitting Standard
- ✓ 10' (120") PFA Insulated Cable with Strain Relief
- ✓ 316L SS Wetted Surfaces with 32 µin or Better Finish
- Ungrounded J, K, T or E Thermocouple, Special Limits of Error
- ✓ -50 to 200°C (-58 to 392°F) Temperature Range

## **Options**

- Fitting Styles
- ✓ Probe Lengths
- Cable Lengths

The OMEGA® TCS-H-CB-120 Series thermocouple probe assemblies are available in standard lengths from 3 to 6", with an ungrounded thermocouple probe with special limits of error. Standard probes are available in J, K, T and E calibrations. These heavy-duty probes have a %" diameter, which steps down to a %" diameter at the probe tip, for fast response and additional strength. 10' (120") of PFA insulated and jacketed cable with strain relief is standard. Please consult sales for available options, including probe lengths, cable lengths and sanitary fitting styles.

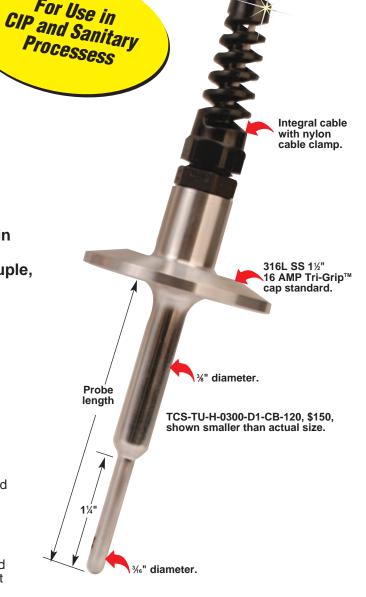

### MOST POPULAR MODEL HIGHLIGHTED!

To Order (Specify Model Number)					
Model No.		Thermocouple Calibration	Sheath Diameter**	Probe Length	
TCS-(*)U-H-0300-D1-CB-120		J, K, T or E	3/8"	3"	
TCS-(*)U-H-0400-D1-CB-120		J, K, T or E	3/8"	4"	
TCS-(*)U-H-0500-D1-CB-120		J, K, T or E	3/8"	5"	
TCS-(*)U-H-0600-D1-CB-120		J, K, T or E	3/8"	6"	

<sup>\*</sup> Specify calibration: J, K, T or E

For lengths longer than 6", change "0300" in model number to the required length (12" = 1200,  $9\frac{1}{4}$ " = 0925)

Ordering Example: TCS-TU-H-0600-D1-CB-120, Type "T" ungrounded thermocouple, heavy-duty design with 3/6" step-down diameter, 6" length, with 11/2" 16 AMP flange and 10' (120") cable with molded strain relief.

<sup>\*\*</sup> $\frac{3}{6}$ " diameter stepped down to  $\frac{3}{6}$ " at the probe tip.

SANITARY THERMOCOUPLE

**ASSEMBLIES** 

Standard Duty—With Integral Cable

TCS-S-CB-120 Series



**All Models** 

- Standard Duty ¼" Probe Diameter
- ✓ 1½" 16 AMP Tri-Grip™ (Tri-Clamp® Compatible) Fitting Standard
- ✓ 10' (120") PFA Insulated Cable with Strain Relief
- ✓ 316L SS Wetted Surfaces with 32 µin or Better Finish
- Ungrounded J, K, T or E Thermocouple, Special Limits of Error
- ✓ -50 to 200°C (-58 to 392°F) Temperature Range

## **Options**

- Fitting Styles
- Probe Lengths
- Cable Lengths

The OMEGA® TCS-S-CB-120 Series thermocouple probe assemblies are available in standard lengths from 3 to 6", with an ungrounded thermocouple probe with special limits of error. Standard probes are available in J, K, T and E calibrations. Standard features include a 1½" 16 AMP Tri-Grip™ fitting, and 10' (120") of PFA insulated and jacketed cable with strain relief. Please consult sales for available options, including probe lengths, cable lengths and sanitary fitting styles.



### MOST POPULAR MODEL HIGHLIGHTED!

To Order (Specify Model Number)					
Model No.	Thermocouple Calibration	Sheath Diameter	Probe Length		
TCS-(*)U-S-0300-D1-CB-120	J, K, T or E	1/4"	3"		
TCS-(*)U-S-0400-D1-CB-120	J, K, T or E	1/4"	4"		
TCS-(*)U-S-0500-D1-CB-120	J, K, T or E	1/4"	5"		
TCS-(*)U-S-0600-D1-CB-120	J, K, T or E	1/4"	6"		

<sup>\*</sup> Specify calibration: J, K, T or E

To order with longer cable lengths, change model number suffix from "-120" to desired length in inches. For lengths longer than 6", change "0300" in model number to the required length (12" = 1200,  $9\frac{1}{4}$ " = 0925)

**Ordering Example: TCS-TU-S-0600-D1-CB-120,** Type "T" ungrounded thermocouple, ½" diameter, 6" length, with 1½" 16 AMP flange and 10' (120") cable with molded strain relief.

# omega.co.uk®

Your One-Stop Source for Process Measurement and Control!

# www.omega.co.uk



# UNITED STATES

www.omega.com 1-800-TC-OMEGA Stamford, CT.

#### **CANADA**

www.omega.ca Laval(Quebec) 1-800-TC-OMEGA

#### **GERMANY**

www.omega.de Deckenpfronn, Germany 0800-8266342

## **UNITED KINGDOM**

Freephone 0800 488 488 | International +44(0) 161 777 6622 | Fax +44(0) 161 777 6622

www. omega.co.uk Manchester, England 0800-488-488 +44-(0)161-777-6611

#### **FRANCE**

www.omega.fr 0800-466-342

#### **BENELUX**

www.omega.nl 0800-099-33-44



Sales@omega.co.uk

# More than 100,000 Products Available!

## Temperature

Calibrators, Connectors, General Test and Measurement Instruments, Handheld Instruments for Temperature Measurement, Ice Point References, Indicating Labels, Crayons, Cements and Lacquers, Infrared Temperature Measurement Instruments, Recorders, Relative Humidity Measurement Instruments, PT100 Probes, PT100 Elements, Temperature & Process Meters, Timers and Counters, Temperature and Process Controllers and Power Switching Devices, Thermistor Elements, Probes and Assemblies, Thermocouples, Thermowells and Head and Well Assemblies, Transmitters, Thermocouple Wire, RTD Probes

### Flow and Level

Air Velocity Indicators, Doppler Flowmeters, Level Measurement, Magnetic Flowmeters, Mass Flowmeters, Pitot Tubes, Pumps, Rotameters, Turbine and Paddle Wheel Flowmeters, Ultrasonic Flowmeters, Valves, Variable Area Flowmeters, Vortex Shedding Flowmeters

# pH and Conductivity

Conductivity Instrumentation, Dissolved Oxygen Instrumentation, Environmental Instrumentation, pH Electrodes and Instruments, Water and Soil Analysis Instrumentation

## Data Acquisition

Communication Products and Converters, Data Acquisition and Analysis Software, Data Loggers Plug-in Cards, Signal Conditioners, USB, RS232, RS485, Ehernet and Parallel Port Data Acquisition Systems, Wireless Transmitters and Receivers

## Pressure, Strain and Force

Displacement Transducers, Dynamic Measurement Force Sensors, Instrumentation for Pressure and Strain Measurements, Load Cells, Pressure Gauges, Pressure Reference Section, Pressure Switches, Pressure Transducers, Proximity Transducers, Regulators, Pressure Transmitters, Strain Gauges, Torque Transducers, Valves

#### Heaters

Band Heaters, Cartridge Heaters, Circulation Heaters, Comfort Heaters, Controllers, Meters and Switching Devices, Flexible Heaters, General Test and Measurement Instruments, Heater Hook-up Wire, Heating Cable Systems, Immersion Heaters, Process Air and Duct, Heaters, Radiant Heaters, Strip Heaters, Tubular Heaters